


User's Guide

HP Z3801A GPS Receiver

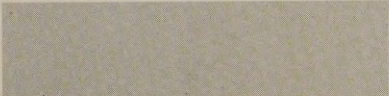

User's Guide

This guide describes how to install and begin to operate the HP Z3801A GPS Receiver. The information in this guide applies to instruments having the number prefix listed below, unless accompanied by a "Manual Updating Changes" package indicating otherwise.

SERIAL PREFIX NUMBER: 3506A and above

HP Z3801A GPS Receiver

©Copyright Hewlett-Packard Company 1996

All Rights Reserved.
Reproduction, adaptation, or translations without prior written permission is prohibited, except as allowed under the copyright laws.

Printed: November 1996

Printed in USA

**Manual part number
Z3801-90001**

Certification and Warranty

Certification

Hewlett-Packard Company certifies that this product met its published specification at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (formerly National Bureau of Standards), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

Warranty

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For detailed warranty information, see back matter.

Safety Considerations

General

This product and related documentation must be reviewed for familiarization with this safety markings and instructions before operation.

This product is a safety Class I instrument (provided with a protective earth terminal).

Before Applying Power

Verify that the product is set to match the available line voltage and the correct fuse is installed. Refer to instructions in Chapter 1 of the Manual.

Safety Earth Ground

An uninterruptible safety earth ground must be provided from the mains power source to the product input wiring terminals or supplied power cable.

Warning Symbols That May Be Used In This Book



Instruction manual symbol; the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual.



Indicates hazardous voltages.

Safety Considerations (contd)



Indicates earth (ground) terminal.



or



Indicated terminal is connected to chassis when such connection is not apparent.



Indicates Alternating current.



Indicates Direct current.

WARNING

BODILY INJURY OR DEATH MAY RESULT FROM FAILURE TO HEED A WARNING. DO NOT PROCEED BEYOND A WARNING SIGN UNTIL THE INDICATED CONDITIONS ARE FULLY UNDERSTOOD AND MET.

CAUTION

Damage to equipment, or incorrect measurement data, may result from failure to heed a caution. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

For additional safety and acoustic noise information, see back matter.

Contents

In This Guide

Guide Organization	vii
Description of the HP Z3801AGPS Receiver	viii
Options	ix
Accessories Supplied	ix
Accessories Available	ix
Accessories Supplied and Available	x
Manuals	xi
Supplied Manual	xi
Available Documents	xi

1 Getting Started

Z3801A Front Panel at a Glance	1-2
HP Z3801A Rear Panel at a Glance	1-3
Preparing the GPS Receiver for Use	1-4
To Assemble and Install the Antenna System	1-4
To Assemble the DC Power Connector	1-4
Powering Up the Receiver	1-6
Overview of the Power-Up Procedure (What to Expect)	1-6
To Power Up the Receiver	1-6
To Understand the Receiver Status Screen Data	1-10
Installing the Automated HP SatStat Program for Continual Status Updates	1-11
Operating the Automated HP SatStat Program	1-12
Customizing the Receiver Operation	1-13
Using Commands to Control Key Functions (Examples)	1-14
To Perform Basic Installation and Simple Customizing	1-14
If required, restore all of the Receiver's internal settings to their factory shipment values by invoking a system preset.	1-14

Initiate “surveying”, an automatic determination of the Receiver’s antenna position. 1-15

Set the Receiver to compensate for the length of the antenna cable. 1-15

Set the Receiver to exclude satellites which appear below a specified elevation angle. 1-16

Set the Receiver to display local time rather than UTC time. 1-16

To Install With a Limited View of the Sky, To Bypass Position Survey Operation 1-16

2 Features and Functions

Chapter Contents 2-2

Inputs 2-3

ANTENNA Input 2-3

Recommended Antenna Cable Assemblies 2-3

Antenna Cable Length Delay 2-4

DC INPUT J4 Power Jack 2-6

Outputs 2-6

10 MHz OUT J2 Output 2-6

10 MHz Outputs — via I/O Port 1 J3 2-6

1 PPS (One Pulse Per Second) Outputs — via I/O Port 1 J3 2-6

RS-422 Serial Port, I/O Port 1 J3 2-7

Indicators 2-8

Power Indicator 2-8

Enabled/Active Indicator 2-8

Alarm Indicator 2-8

GPS Lock Indicator 2-8

Holdover Indicator 2-8

Connecting to a Computer 2-9

Operating Concepts 2-9

General 2-9

Holdover Description 2-10

In Case of a Problem 2-11

Hours after powerup, Receiver not establishing
GPS lock 2-11

Receiver not maintaining GPS lock 2-12

3 Using the Receiver Status Screen**Chapter Contents 3-2****Using and Reading the Receiver Status Screen 3-3**

Tutorial on Using the Status Screen to Interface With the
Receiver 3-3

Demonstration of Holdover Operation 3-8

Receiver Status Screen Data 3-11

SYNCHRONIZATION Section of the Status Screen 3-12

SYNCHRONIZATION Summary Line 3-12

SmartClock Mode 3-12

Reference Outputs 3-13

ACQUISITION Section of the Status Screen 3-14

ACQUISITION Line 3-14

Tracking, Not Tracking 3-14

Time 3-16

Position 3-17

HEALTH MONITOR Section of the Screen 3-18

The Receiver Status Screen at a Glance 3-19**4 Command Listing and Status Information****Chapter Contents 4-2****HP Z3801A Commands 4-3**

SCPI Conformance Information 4-3

SCPI Syntax Conventions 4-3

Status Information 4-10

Standard Event Register Bit Assignments 4-10

Questionable Status Register Bit Assignments 4-11

Operation Status Register Bit Assignments 4-11

Powerup Status Register Bit Assignments 4-11

Holdover Status Register Bit Assignments 4-11

Hardware Status Register Bit Assignments 4-12

Information that Appears in the Diagnostic Log	4-12
Model for Powerup, Locked, and Holdover States	4-13
Error Messages	4-15

5 Specifications Summary

Specifications and Characteristics 5-2

GPS Receiver Features 5-2

10 MHz Output Characteristics 5-2

J2 5-2

1 PPS Output Characteristics 5-3

Front Panel Indicators (LEDs) 5-3

Remote Interface (Port 1) 5-3

Antenna and Cabling Information 5-4

Environmental 5-4

HP 58504A Antenna Assembly 5-4

GPS Time and Frequency Reference Receiver 5-4

Power Requirements 5-4

General Information 5-5

Other Information 5-5

Index

In This Guide

This preface contains the following information:

- Guide Organization pg. vii
- Description of the HP GPS Receiver pg. viii
- Options pg. ix
- Accessories Supplied and Available pg. ix

Guide Organization

Table of Contents

In This Guide (this preface) introduces you to the User's Guide, and provides general information on the GPS Receiver.

Chapter 1, **"Getting Started,"** is a quick-start chapter that introduces you to the HP GPS Receiver with a brief overview of the Receiver's indicators and connectors. Installation and power-up instructions, and a section that provides sample commands to start operating the Receiver are provided to get you familiar and comfortable with operating the Receiver.

Chapter 2, **"Features and Functions,"** provides information on Receiver's features and functions, connecting to computers, and problem solving (that is, a section titled "In Case of a Problem").

Chapter 3, **"Using the Receiver Status Screen,"** provides information on how to use the Receiver Status screen and the HP SatStat program. An illustrated foldout of the Receiver Status screen, which is a comprehensive summary of key operation conditions and settings, is provided at the end of this chapter.

Chapter 4, **"HP Z3801A Command Listing and Status Information,"** briefly lists all of the commands that can be used to operate the Receiver and provides Receiver status and error message information.

Chapter 5, **"Specifications Summary,"** lists the HP Z3801A specifications and characteristics.

Index

Description of the HP Z3801A GPS Receiver

The HP Z3801A GPS Receiver provides highly accurate time and frequency outputs that can be used for synchronizing CDMA Cellular Land Network wireless base stations.

The Receiver provides highly accurate timing. If a satellite signal is lost, the Receiver automatically switches to holdover mode, which ensures system synchronization for up to 24 hours with reduced accuracy.

The HP Z3801A has the following rear-panel Input/Output connectors:

- an I/O Port 1 25-pin female rectangular D subminiature connector (This connector provides two 1 PPS time outputs, two 10 MHz frequency outputs, and an RS-422 serial interface port).
- 10 MHz output BNC connector
- an Antenna N-type connector
- Power input jack

The front panel contains six Light-Emitting-Diode (LED) indicators to indicate that power has been applied (**Power**), the module has tracked and locked on to one or more GPS satellites (**GPS Lock**), the GPS system is operating in holdover mode (**Holdover**), and an error or invalid condition exists due to system fault or reduced accuracy of the outputs (**Alarm**), and two LEDs illuminated under user-defined conditions (**Enabled**, **Active**).

The HP Z3801A has no front panel display or keypad entry. Information is remotely entered into and retrieved from the HP Z3801A using customer-supplied DCE (Digital Communications Equipment) connected to the rear-panel 25-pin RS-422 serial interface port.

Options

- Rack Mount Tray 29.5 inch (750-millimeter)
- CV90-14271-1 GPS Receiver Unit, +27 Vdc, beige, single output
- CV90-14271-2 GPS Receiver Unit, -54 Vdc, beige, single output
- CV90-14271-11 GPS Receiver Unit, +27 Vdc, gray, single output
- CV90-14271-12 GPS Receiver Unit, -54 Vdc, gray, single output
- CV90-15357-1 GPS Receiver Unit, +27 Vdc, beige, single output
- CV90-15357-2 GPS Receiver Unit, -54 Vdc, beige, single output
- CV90-14805-1 Shelf, Dual GPS Receiver Mounting, beige
- CV90-14805-11 Shelf, Dual GPS Receiver Mounting, gray

Accessories Supplied and Available

Accessories Supplied

HP SatStat Program (59551-13401)

Accessories Available

For more details on available GPS accessories refer to the *Designing Your GPS Antenna System Configuration Guide* (HP P/N 5964-9068E). Refer to the subsections titled “Recommended Antenna Cable Assemblies” and “Antenna Cable Length Delay” in Chapter 2 of this guide for more cable information.

- CV90-14807 Coaxial cables
- CE90-14806 Antenna, GPS Receiver
- CE90-15275 Lightning Arrestor, GPS Receiver
- CE90-15276 Line Amplifier, GPS Receiver
- HP 58504A GPS Antenna Assembly
- HP 58510A GPS Antenna Environmental Cover and Ground Plane (optional use with the HP 58504A GPS Antenna Assembly)

- HP 58513A GPS Antenna Assembly¹
- HP 58505B Lightning Arrester
- HP 58509A Antenna Line Amplifier (recommended for distances greater than 175ft./53.3 meters for RG-213 cable; 200 ft/61 meters for LMR cable)
- HP 58518A RG-213 Antenna Cable Assembly (3.3 to 164.0 ft, or 1 to 50 meters) — TNC-to-N connectors
- HP 58519A RG-213 Interconnect Cable Assembly (3.3 to 164.0 ft, or 1 to 50 meters) — N-to-N connectors
- HP 58520A LMR 400² Antenna Cable Assembly (3.3 to 360.8 ft, or 1 to 110 meters) — TNC-to-N connectorsHP 58521A LMR 400⁵ Interconnect Cable Assembly (3.3 to 360.8 ft, or 1 to 110 meters) — N-to-N connectors
- HP 58518AA³ RG-213 TNC-N Antenna Cable Assembly (3.3 to 164.0 ft, or 1 to 50 meters) — without connectors attached
- HP 58519AA³ RG-213 N-N Interconnect Cable Assembly (3.3 to 164.0 ft, or 1 to 50 meters) — without connectors attached
- HP 58520AA³ LMR 400 TNC-N Antenna Cable Assembly (3.3 to 360.8 ft, or 1 to 110 meters) — without connectors attached
- HP 58521AA³ LMR 400 N-N Interconnect Cable Assembly (3.3 to 360.8 ft, or 1 to 110 meters) — without connectors attached

¹The HP 58513A is a completely assembled unit, which includes the HP 58504A Antenna, a 4-foot cable, the HP 58510A environmental cover and ground plane, and a 1-foot stainless steel mounting mast.

² LMR 400 cables are low-loss, less flexible than RG-213, but very good coaxial cables.

³ These cables do not have the connectors attached. A connector kit is supplied.

Manuals


Supplied Manual

HP Z3801A User's Guide (this guide), HP P/N Z3801-90001

Available Documents


- *Designing Your GPS Antenna System*
Configuration Guide, HP P/N 5964-9068E
- *GPS and Precision Timing Applications*
Application Note 1272, HP P/N 5963-6852E

Z3801A Front Panel at a Glance

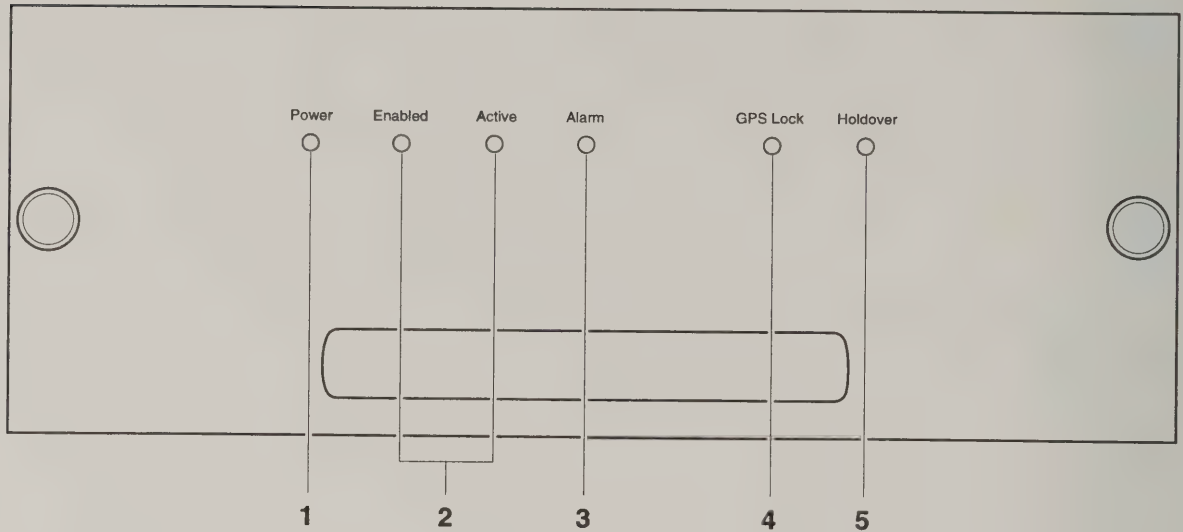

- 1 When the **Power** indicator is illuminated, it indicates that the proper input power is supplied to the Receiver.
- 2 User definable indicators labeled **Enabled** and **Active**. These can be turned on through the RS-422 port.
- 3 When the **Alarm** indicator is illuminated, it indicates that the receiver has detected an internal condition that requires attention.
- 4 When the **GPS Lock** indicator is illuminated, it indicates that the Receiver is receiving the GPS signal and is locked on one or more satellite(s).
- 5 When the **Holdover** indicator is illuminated, it indicates that the Receiver is NOT locked to the GPS signal. The Receiver is keeping time based on the internal reference oscillator signal. The internal reference oscillator will determine the accuracy of the 1 PPS signal and the 10 MHz reference output. (See specification for Accuracy in Holdover in Chapter 5, "Specifications Summary," in this guide.)

HP Z3801A Rear Panel at a Glance

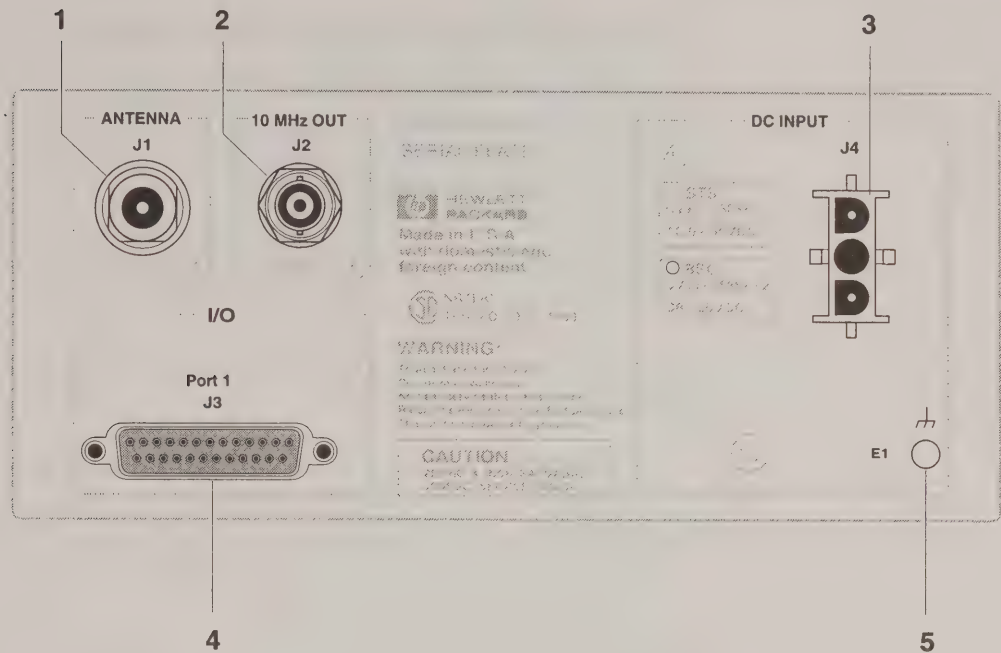

- 1 ANTENNA J1 N-type (female) connector.
- 2 10 MHz OUT J2 BNC (female) output connector for user-specific applications.
- 3 DC INPUT J4 power connector.
- 4 I/O Port 1 J3 25-pin female D Subminiature RS-422 serial interface port for remote control, monitoring, and retrieving of the unit's memory data. This port also provides two 1 PPS time outputs, and two 10 MHz frequency outputs.
- 5 E1 Ground stud provides a low impedance ground for safety and systems grounding. **WARNING:** Ground stud must be connected to Safety Earth Ground.

Preparing the GPS Receiver for Use

To Assemble and Install the Antenna System

CABLE CONSIDERATIONS. When using the antenna cables with the HP GPS Receiver, you should observe certain precautions. Consult your local electrical and building ordinance codes on how to install RG-213 cables (HP 58518A/519A) or LMR 400 cables (HP 58520A/521A). Certain codes might require you to put the cables inside a conduit, or to use cables made with a non-toxic fire retardant insulation.


To assist you with installing your GPS antenna system, refer to the following HP documents:

- *Designing Your GPS Antenna System Configuration Guide* (HP P/N 5964-9068E), which discusses the components of an HP GPS timing receiver system and how to custom design the configuration of your antenna system. *Contact your local HP Sales office for a copy of this guide.*
- Information Notes that provide installation procedures for the applicable HP GPS antenna and accessories that you purchase.
- The subsection titled “ANTENNA Input” in Chapter 2, “Features and Functions,” of this guide.

To Assemble the DC Power Connector

- 1 Note that you will have to assemble your own dc power cable using 18 AWG connecting wires and a three-pin AMP Universal MATE-N-LOKII® (female) connector plug (shown in Figure 1-1).

Preparing the GPS Receiver for Use

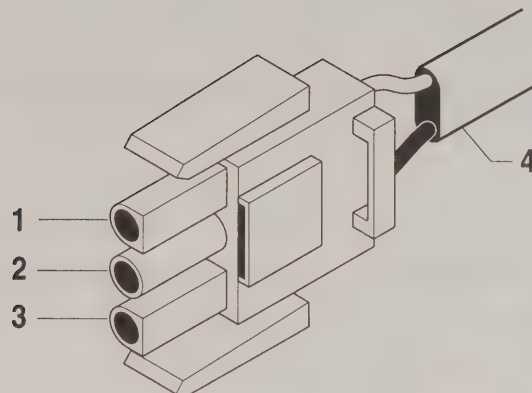

1 dc supply (+)

3 dc supply (-)

2 Not used

4 Cable wires

Figure 1-1. Three-Pin Plug Pinouts (Front View)

- 2 From the rear of the plug, connect the supply-side wire of the external power supply or battery to pin 1 of the plug. Connect the external battery's return (ground) wire to pin 3. Use the rear-panel **E1** ground stud to connect the GPS Receiver chassis to a system ground.
- 3 Observing the correct polarity, attach the other ends of the wires to a proper dc power source to operate the Receiver.

NOTE

Do not apply power to the Receiver unless a fully operational antenna system is connected to the rear-panel ANTENNA J1 connector. Power applied with no antenna input can initiate an extended search process that may increase time to reach GPS lock. You can halt the extended search by disconnecting and reconnecting (cycling) the external dc supply (you may need to leave power disconnected for greater than five seconds).

Powering Up the Receiver

Overview of the Power-Up Procedure (What to Expect)

When you power up the HP GPS Receiver for the first time, you should expect it to run through the following sequence:

- goes through internal diagnostics and all front-panel lights flash,
- acquires and tracks four satellites,
- computes the Receiver's position,
- locks to the 1 PPS (one pulse-per-second) time standard provided by GPS, and
- begins steady-state operation, acting as a source of timing and synchronization information derived from the GPS standard.

Elapsed time for each step will vary, depending largely on how many satellites your antenna is able to “see” when you power up. If many satellites are visible when you power up, the Receiver will take at least 8 minutes and at most 25 minutes to calculate its position from the constellation of satellites overhead. The derived position will be improved over a period of time by further averaging. When the **GPS Lock** indicator lights, the basic functionality of the Receiver is available; however, optimal performance is delivered later.

To Power Up the Receiver

- 1 Connect the antenna system to the rear-panel **ANTENNA J1** Type-N connector of the Receiver as described in the instructions given in the subsection titled “To Assemble and Install the Antenna System” on page 1-4 of this chapter.

NOTE

Although connecting the HP GPS Receiver to a terminal or computer isn't necessary for it to attain GPS lock, the terminal is needed for you to observe the progress of the Receiver or to configure alarms.

- 2 Connect the HP GPS Receiver to your system DCE device (Digital Communications Equipment) via the rear-panel **I/O Port 1 J3 RS-422** port using an appropriate (*customer supplied*) system interface cable as shown in Figure 1-2.

NOTE

Do not apply power to the Receiver unless a fully operational antenna system is connected to the rear-panel ANTENNA J1 connector. Power applied with no antenna input can initiate an extended search process that may increase time to reach GPS lock. You can halt the extended search by disconnecting and reconnecting (cycling) the external dc supply (you may need to leave power disconnected for greater than five seconds).

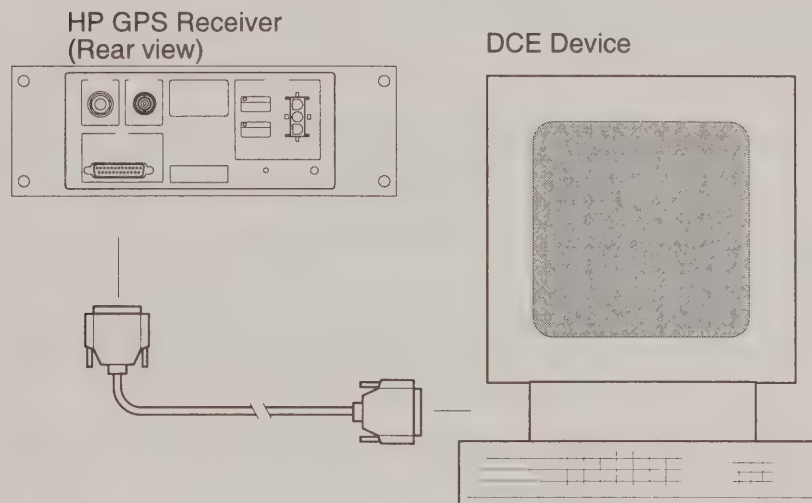


Figure 1-2. Connecting the HP GPS Receiver to a DCE Device
(DTE-to-DCE Interface cable is customer supplied)

- 3 Turn your DCE device (or PC equipped with a correctly wired RS-422 serial-port connector) on.

You will need to run a terminal emulation program on your DCE device in order to communicate via the RS-422 serial port. Most PCs contain a terminal emulation program, especially PCs with Windows application. If your PC does not contain a terminal emulation program, purchase one of the following programs: PROCOMM PLUS (DATASTORM Technologies, Inc.®), PROCOMM PLUS for Windows, Cross Talk (Hayes®), or any other terminal emulation program. (Note: HP is not endorsing any of these products.)

Another option to purchasing and installing a terminal emulation program is to use the HP SatStat Program. See the section titled "Installing the Automated HP SatStat Program for Continual Status Updates" on page 1-11 for installation and operating information.

- 4 Set the RS-422 port of your DCE device (or PC) to match the following values:

Pace:	NONE
Baud Rate:	19200
Parity:	Odd
Data Bits:	7/char.
Start Bits:	1
Stop Bits:	1

NOTE

The RS-422 port configurations of the Receiver and the DCE device/PC must be the same for communications between the two. Thus, for this power-up procedure, set your DCE device/PC to match the default values listed above.

- 5 Apply the proper power source to the rear-panel **Power** input jack of the Receiver. (See the appropriate subsection titled “To Connect DC Power” on page 1-4)

The following sequence of events occurs after power is applied to the Receiver.

- a. Only the front-panel **Power** indicator lights.
- b. After a moment, the Receiver runs through its self-test diagnostics as indicated by the flashing front-panel indicators.
- c. After the self test is completed, just the **Power** indicator remains lit.

If the **Alarm** indicator lights, a failure may have occurred during the self test. Refer to Table 4-2 in Chapter 4, “Command Listing and Status Information,” of this guide for information on the Alarm capability.

- d. The Receiver begins to search the sky for all available satellites.
- e. From the DCE device keyboard, type

:SYSTEM:STATUS? and press Enter (or Return).

Confirm that the **scpi>** prompt is displayed after pressing Return. If no prompt or an error-number prompt (**E-xxx>**) is displayed, then try typing the command again.

The computer displays the status screen as shown in the sample status screen in Figure 1-3.

You must re-enter the :SYSTEM:STATUS? command each time you want an updated status screen.

NOTE

You have been provided a Windows program called HP SatStat, which provides *continual status updates* of the HP GPS Receiver's status screen. If you are using an RS-422 equipped PC, it must have Windows installed to operate the user interface application. The application is easy to install and operate.

See the section titled "Installing the Automated HP SatStat Program for Continual Status Updates" on page 1-11 in this guide.

- f. When four or more satellites are tracked as will be indicated in the status screen, automatic position computation is initiated.
- g. Finally, the Receiver goes into steady-state operation (which requires one satellite) and the **GPS Lock** indicator lights, indicating the Receiver has locked on to the GPS signal.

After the initial powerup, the Receiver is set for basic operation. That is, the Receiver operating parameters are set to their powerup default values or states.

If you need to customize the Receiver operation, see the section titled "Customizing the Receiver Operation" on page 1-13 for a list of key things you may want to perform to customize the operating parameters of the Receiver.

Chapter 1 Getting Started

Powering Up the Receiver

```
----- Receiver Status -----
SYNCHRONIZATION ..... [ Outputs Valid ]
SmartClock Mode .....
>> Locked to GPS
    Recovery
    Holdover
    Power-up
Reference Outputs .....
TFOM      3          FFOM      0
1PPS TI +7.2 ns relative to GPS
HOLD THR 1.000 us
Holdover Uncertainty .....
Predict  49.0 us/initial 24 hrs

ACQUISITION .....[GPS 1PPS Valid]
Tracking: 6 _____ Not Tracking: 1 _____
PRN  El  Az  SS      PRN  El  Az
 2   49 243 168      14   11  82
16   24 282 125
18   38 154 132
19   65  52 168
27   62 327 246
31   34  61 133
Time _____ +1 leap second pending
UTC      23:59:59      31 Dec 1995
GPS 1PPS Synchronized to UTC
ANT DLY  120 ns
Position
MODE      Survey: 17.5% complete
AVG LAT   N  37:19:32.264
AVG LON   W 121:59:52.112
AVG HGT                    +41.86 m (MSL)
ELEV MASK 10 deg
HEALTH MONITOR ..... [ OK ]
Self Test: OK Int Pwr: OK Oven Pwr: OK OCXO: OK EFC: OK GPS Rcv: OK
```

Figure 1-3. Sample Status Screen

To Understand the Receiver Status Screen Data

One of the key indicators on the screen is the **ACQUISITION** status indicator. It shows “GPS 1 PPS Valid” as soon as satellite information is sufficient.

Refer to Chapter 3, “Using the Receiver Status Screen,” in this guide for a tutorial on how to use the status screen (shown in Figure 1-3). A reference section that defines the different data indicated in the status screen is also provided in Chapter 3.

Installing the Automated HP SatStat Program for Continual Status Updates

This Windows application provides continual status updates of the Receiver Status screen. Your PC must be equipped with a correctly wired (See Table 2-3 in Chapter 2.) RS-422 serial-port adapter and have Windows installed to operate the user interface application. The application is easy to install and operate.

- 1 Insert the HP SatStat disk in drive A.
- 2 From the File menu in either the Program Manager or File Manager, choose Run.
- 3 Type **a:setup**, and press Enter (or Return). The SatStat Setup screen will appear, and installation will proceed.
- 4 Once the program is installed, you can start it by double-clicking the **HP SatStat** icon that was created during the installation.
- 5 You should establish communication with the HP GPS Receiver. This requires connection from the DCE device (Digital Communications Equipment) via the rear-panel **I/O Port 1 J3** RS-422 port using an appropriate (*customer supplied*) system interface cable. Assuming you've got the cable attached to make this connection, you may want to check the settings.
 - a. Select **CommPort**, then choose **Settings**.

The Communication Settings dialog box is displayed. Unless someone has reprogrammed the CommPort settings on the HP GPS Receiver, these settings are probably OK. *The one setting that is likely to need changing is the Com Port. The application defaults it to Com1, but the serial port on your PC may be assigned to a different Com Port. Select the appropriate setting. If you are unsure, Com1 will be your best bet (worst case, you can cycle through all of them until it works).*

- b. If you made any changes on this Settings form, select **OK**, otherwise you can just **Cancel**.

Operating the Automated HP SatStat Program

- 1 Select **CommPort**, then choose **Port Open**.

The main form of the Receiver Status screen is displayed. The program will send some commands to the HP GPS Receiver and then the main form should begin to periodically update every few seconds. If you are getting screen updates, proceed to the next step. Otherwise, something is wrong with your CommPort settings or perhaps the physical connection between your PC and the Receiver.

If you need to control the Receiver or query for the status of a setting of the Receiver, use the “Control & Query” form (this form will usually be stacked beneath the main form). To activate this form, click anywhere on it. Select **Control** (or **Query**), then choose the type of control (or query) you want. This will pull down a list of control (or query) functions that you can choose from, and the corresponding command will be displayed. To send the command, click on **Send Cmd**. Hence, with the Control & Query form you can control the Receiver without knowing the command or query.

More information about the Windows program is provided in the “Getting Started” Help file.

- 2 Refer to the section titled “Using and Reading the Receiver Status Screen” in Chapter 3, “Using the Receiver Status Screen,” of this guide for a tutorial and demonstration of what to look for when viewing the status screen.

Customizing the Receiver Operation

Here are some key things you might want to perform to customize the Receiver operation:

- Execute a system preset if you've found the Receiver in an unknown or questionable operating state.
- Make the Receiver survey if it wasn't already surveying.
- Set the antenna delay.
- Set the elevation mask angle.
- Set the time zone.

See the section titled “Using Commands to Control Key Functions (Examples)” on the following page for more information.

Using Commands to Control Key Functions (Examples)

The operation of the HP GPS Receiver is designed to be as automatic as possible. However, there are several situations where serial interface control is required. The tasks described here are those most commonly encountered.

For each task in this section, you can use either a terminal emulation program or the HP SatStat program to issue the selected commands. Additional information about the commands is provided in Chapter 4, “Command Listing and Status Information,” of this guide.

To Perform Basic Installation and Simple Customizing

After connecting the Receiver to the antenna, power source, DCE device RS-422 port, and after the self test is completed, you may want to complete installation using one or more of the capabilities described below.

If required, restore all of the Receiver’s internal settings to their factory shipment values by invoking a system preset.

After executing the system preset, the Receiver will begin normal operation: it will acquire GPS signals, determine the date, time, and position automatically, bring the reference oscillator ovens to a stable operating temperature, lock the reference oscillator and its output to 10 MHz, and synchronize the 1 PPS output to UTC.

Settings affected by system preset are listed in Chapter 4, “Command Listing and Status Information,” of this guide under the :SYSTEM:PRESET command definition.

The Receiver is preset using the command:

```
:SYSTEM:PRESET
```

Note that system preset should be performed only when necessary.

Initiate “surveying”, an automatic determination of the Receiver’s antenna position.

When “position survey” is invoked, the Receiver is set to ascertain the position of its antenna automatically. This survey is important; correct antenna position data is required for the Receiver to deliver specified performance.

The Receiver uses data from orbiting satellites to survey; hence, the antenna must be installed and operational for the survey to work. However, if you have a limited view of the sky, you can complete basic installation, then read forward to the section titled “To Install with a Limited View of the Sky” on page 1-16 for a means of overriding the survey operation and entering position data directly.

The survey is an iterative process. The Receiver transits to “Position Hold” when a usable position has been obtained.

Set the Receiver to survey using command:

```
:PTIME:GPSSYSTEM:POSITION:SURVEY ONCE
```

Set the Receiver to compensate for the length of the antenna cable.

The Receiver can be custom-configured to compensate for the length of the antenna cable. The phase of the Receiver’s internal clock is therefore offset from the GPS standard by the number of nanoseconds of delay introduced through the antenna cable. The amount of error is typically on the order of a few hundred nanoseconds. Should you decide to correct for this error, tables 2-1A and 2-1B in Chapter 2, “Features and Functions,” of this guide provides typical corrections for standard antenna cable lengths.

Set the Receiver to compensate for antenna cable delay using command:

```
:PTIME:GPSSYSTEM:ADELAY <nanoseconds>
```

It is normal to observe that the Receiver momentarily goes into holdover after any change in antenna delay.

Set the Receiver to exclude satellites which appear below a specified elevation angle.

At the factory, and whenever the Receiver is preset, the Receiver is set to seek satellites visible from zenith down to 10 degrees above the horizon — down to an “elevation mask angle” of 10 degrees. The factory elevation mask angle setting is intended to provide a full view of the sky. The Receiver can be custom-configured to use a different elevation mask angle.

Set the Receiver elevation mask angle using the command:

```
:PTIME:GPSYSTEM:EMANGLE <degrees>
```

Set the Receiver to display local time rather than UTC time.

Set the offset from UTC time to local time using the command:

```
:PTIME:TZONE <hours>, <minutes>
```

**To Install With a Limited View of the Sky,
To Bypass Position Survey Operation**

In order to reach steady-state operation, the Receiver must know the position of the antenna. The Receiver is able to collect enough information from four satellites to compute this position. The “position survey operation” takes in data from the satellites, iterating until the antenna position is known to the required precision. The Receiver will automatically use its position survey operation on powerup and :SYSTEM:PRESET.

Alternatively, if the antenna position is already known to seconds of arc, and the Receiver cannot see enough satellites, you may manually enter antenna position as shown in the following text.

NOTE

An incorrect value for the position will confuse the Receiver, and will degrade the timing information accuracy or even prevent tracking any satellites.

Using Commands to Control Key Functions (Examples)

Set the Receiver antenna position using the command format shown below (for clarity, an example is provided rather than a complex description.):

:PTIM:GPS:POS N,37,19,32.5,W,121,59,51.2,40.12

Set the latitude, longitude, and height parameters to represent the latitude (in degrees, minutes, seconds), longitude (in degrees, minutes, seconds), and altitude in meters above mean sea level (MSL). (Note: if you know the position to this accuracy, the desired position is of the antenna rather than the Receiver.)

NOTE

For faster acquisition following repair, or power failure you may want to write down the position after the Receiver has completed its survey.

Chapter Contents

You will find that this section makes it easy to look up all the details about a particular feature of the HP Z3801A GPS Receiver. This chapter provides inputs, outputs, indicators, terminal and computer connections, operating concepts (GPS lock and holdover), and problem-solving information.

This chapter is organized as follows:

- Inputs page 2-3
 - ANTENNA Input page 2-3
 - DC INPUT J4 Power Jack page 2-6
- Outputs page 2-6
 - 10 MHz OUT J2 Output page 2-6
 - 10 MHz Outputs vial I/O J3 page 2-6
 - 1 PPS Outputs via I/O Port 1 J3 page 2-6
 - RS-422 Serial Port, I/O Port 1 J3 page 2-7
- Indicators page 2-8
 - Power Indicator page 2-8
 - Enabled/Active Indicator page 2-8
 - Alarm Indicator page 2-8
 - GPS Lock Indicator page 2-8
 - Holdover Indicator page 2-8
- Connecting to a Computer page 2-9
- Operating Concepts page 2-9
 - General page 2-9
 - Holdover Description page 2-10
- In Case of a Problem page 2-11

Inputs

ANTENNA Input

The N-type (female) **ANTENNA** connector allows you to connect the HP 58504A or HP 58513A Antenna Assembly. The HP antenna assemblies are “active” antennas; a “passive” antenna will not work with the Receiver.

Integral to the antenna assembly is a low noise amplifier (LNA) that is provided for Receiver operation with antenna cable lengths up to 378 feet (115.2 meters) for LMR 400 cables or 175 feet* (53.3 meters) for RG-213 cables. The single coax cable is used to provide signals from the antenna to the Receiver and to supply a dc voltage to the LNA. For longer antenna feed runs, an additional amplifier (HP 58509A Antenna Line Amplifier) is required to compensate for lengths greater than 378 feet (115.2 meters) or 175 feet (53.3 meters). An environmental cover that shields the antenna from wind, rain, and snow, and a ground plane that prevents problems with reflected signals is available as the HP 58510A — or combined in the HP 58513A.

Refer to Chapter 1, “Getting Started,” in this guide for information on the components of the antenna system and installation instructions.

Recommended Antenna Cable Assemblies

There are two types of cable assemblies that HP recommends you use to connect your antenna system: LMR 400 or RG-213 (Belden® 8267).

The following paragraphs describes when and how many line amplifiers are required with the LMR 400 and RG-213 cables.

* One hundred and seventy-five feet includes the sum total of all of the cables used to connect the antenna to the Receiver (such as the cable between the antenna and line amplifier, the cable between the line amplifier and lightning arrester, and the cable between the lightning arrester and the Receiver).

Inputs

LMR 400 Cable Line Amplifier Requirements

If cable length between GPS Receiver and antenna is:

- Less than 115 meters (377 feet), no line amplifier is necessary.
- More than 115 meters (377 feet) and less than 240 meters (787 feet), you need 1 line amplifier.
- More than 240 meters (787 feet) and less than 360 meters (1181 feet), you need 2 line amplifiers.
- More than 360 meters (1181 feet), contact HP for assistance.

RG-213 Cable Line Amplifier Requirements

If cable length between GPS Receiver and antenna is:

- Less than 53 meters (174 feet), no line amplifier is necessary.
- More than 53 meters (174 feet) and less than 105 meters (345 feet), you need 1 line amplifier.
- More than 105 meters (345 feet) and less than 158 meters (518 feet), you need 2 line amplifiers.
- More than 158 meters (518 feet), contact HP for assistance.

Antenna Cable Length Delay

The RG 213 propagation delay is 1.54 nanoseconds per foot (5.05 ns/meter). The LMR 400 propagation delay is 1.2 nanoseconds per foot (3.93 ns/meter). Given these delay values per foot you can calculate the delay for your cable length.

Tables 2-1A and 2-1B list the delay values that you need to use with the :GPSSYSTEM:REFERENCE:ADELAY <seconds> command for the available the cable assemblies.

Inputs**Table 2-1A. Delay Values for the HP 58518A/519A and HP 58518AA/519AA RG-213 Antenna Cables**

Cable Option	Length	RG 213 or Belden 8267 Antenna Delay Value
001	3.3 ft (1m)	5.0 nanoseconds
002	6.7 ft (2 m)	10.3 nanoseconds
005	16.4 ft (5 m)	25.2 nanoseconds
010	32.8 ft (10 m)	50.5 nanoseconds
015	49.2 ft (15 m)	75.7 nanoseconds
030	98.4 ft (30 m)	151.5 nanoseconds
050	164.0 ft (50 m)	252.5 nanoseconds

The nominal delay value is labeled on the cables. Refer to the *Designing Your GPS Antenna System Configuration Guide* (HP P/N 5964-9068E for more information.

Table 2-1B. Delay Values for the HP 58520A/521A and HP 58520AA/521A LMR 400 Antenna Cables

Cable Option	Length	LMR 400 Antenna Delay Value
001	3.3 ft (1m)	3.9 nanoseconds
002	6.7 ft (2 m)	8.0 nanoseconds
005	16.4 ft (5 m)	19.6 nanoseconds
010	32.8 ft (10 m)	39.3 nanoseconds
015	49.2 ft (15 m)	59.0 nanoseconds
030	98.4 ft (30 m)	118.0 nanoseconds
060	196.8 ft (60 m)	236.1 nanoseconds
110	360.8 ft (110 m)	432.9 nanoseconds

The nominal delay value is labeled on the cables. Refer to the *Designing Your GPS Antenna System Configuration Guide* (HP P/N 5964-9068E for more information.

Outputs

DC INPUT J4 Power Jack

The **DC INPUT J4** jack allows you to connect a BTS 19.5-30.0 Vdc or BSC -38 to -60 Vdc power source to drive the Receiver.

Table 2-2 lists the input jack pin assignments. This jack is used for DC power only.

Table 2-2. DC INPUT J4 Power Connections

Pin Number	Signal Name
1	dc supply (+)
3	dc return (-)

See Figure 1-1 in Chapter 1, “Getting Started,” in this guide for an illustration of the AMP Universal MATE-N-LOKII® dc power jack.

Outputs

10 MHz OUT J2 Output

This is a 10 MHz output reference signal traceable to UTC (USNO) that can be used for synchronizing CDMA test equipment.

10 MHz Outputs — via I/O Port 1 J3

Two additional 10 MHz synchronization signals are available through the I/O Port 1 J3 connector. Refer to Table 2-3 for signal characteristics and connector pin assignment information.

1 PPS (One Pulse Per Second) Outputs — via I/O Port 1 J3

The Receiver outputs two highly accurate 1 PPS time standard outputs for user-specific synchronization applications. Refer to Table 2-3 for signal characteristics and connector pin assignment information.

In the GPS locked mode, the Receiver outputs a 1 PPS signal derived from the internal oscillator, which is locked and traceable back to Coordinated Universal Time (UTC) as determined by GPS. In the absence of GPS, the 1 PPS signal will continue to exist, but the oscillator will go into a holdover mode in which the HP SmartClock™ algorithm will compensate for the instabilities in the oscillator. In the

Outputs

holdover mode, the timing 1 PPS accuracy will degrade as the holdover time increases.

RS-422 Serial Port, I/O Port 1 J3

The 25-pin female D Subminiature (DB-25) connector located on the rear panel provides RS-422 serial communications capability.

This can be used by connecting a DCE device with an RS-422 serial interface port (wired to interface with the receiver's I/O port as listed in Table 2-3) and suitable terminal emulation software, then sending the correct commands for transmitting or retrieving data. You can customize the Receiver on installation, to change the Receiver's operating characteristics, retrieve Receiver state information, and clear the stored data. The pins used are described in Table 2-3.

Table 2-3. Rear-Panel RS-422 Serial Port/10 MHz/1PPS Pin Assignments

*Pin Number	Input/Output	Description
1	Cable Shield	
2 (A), 14 (B)	Output	Transmit Data (TxD) – GPS Receiver output RS-422 (per RS-530)
3 (A), 16 (B)	Input	Receive Data (RxD) – GPS Receiver input RS-422 (per RS-530)
7	——	Signal Ground (SG)
15 12	10 MHz_1- 10 MHz_1+	Differential pseudo ECL 10 MHz output
11 24	10 MHz_2- 10 MHz_2+	Differential pseudo ECL 10 MHz output
17 9	1 PPS/_1- 1 PPS/_1+	Differential pseudo ECL 1 PPS output
8 21	1 PPS/_2- 1 PPS/_2+	Differential pseudo ECL 1 PPS output

*All other pins, no connection.

Indicators

Power Indicator

This indicator lights when the input power is supplied to the Receiver.

Enabled/Active Indicator

These user definable indicators light when turned on through the RS-422 serial interface port.

Alarm Indicator

The Receiver lights this indicator to indicate it has detected an internal condition that requires attention.

Refer to Table 4-2 in Chapter 4, “Command listing and Status Information” of this guide for information on Alarm capability.

GPS Lock Indicator

This indicator lights when the Receiver is tracking satellites and phase-locked its internal reference to the reference time derived from satellite data. This indicator will go off whenever the above condition is not met, which would typically occur when satellite tracking is lost or while the Receiver is powering up.

The principal Receiver setting that can affect this indication is manual selection of reference oscillator holdover operation.

Holdover Indicator

The Receiver lights this indicator to show that GPS lock has been lost and the Receiver is in holdover mode. It only lights if the Receiver has been locked once; it will never light until the Receiver has been locked once. While in holdover, the internal reference oscillator will be adjusted by HP SmartClock™ technology .

NOTE

If the Holdover indicator lights before the Receiver has been locked 24 hours, then the Receiver has not had sufficient time to learn the characteristics of the internal reference oscillator. In this case, the specification for Timing Accuracy during holdover may not be met. This specification applies only after the Receiver has had sufficient stable operation time.

Refer to the subsection titled “Holdover Description” on page 2-10 in this chapter for more information.

Connecting to a Computer

To connect the HP GPS Receiver to a computer, you must have an appropriately wired RS-422 interface cable (*customer supplied*). Refer to Table 2-3 for rear-panel I/O Port 1 J3 pin assignments and signal characteristic information.

The interface cable must also have the proper connector on each end and the internal wiring must be correct. The HP GPS Receiver is considered the Data Terminal Equipment (DTE) for this interface.

The HP Z3801A rear-panel serial interface port has a fixed configuration as described in Chapter 1 of this guide on page 1-12.

Operating Concepts

General

The time required to acquire GPS lock as described in the following paragraph can vary significantly depending on your local conditions. In general, HP strongly recommends that your antenna and cables be set up in accordance with the information provided in this guide prior to using the output signals of the Receiver to ensure they are valid.

Acquiring lock does not mean that the Receiver is fully operational and meeting all specifications. It just means that the Receiver has detected enough satellites to start its survey mode to determine its precise location. An internal measurement FFOM (Frequency Figure of Merit) becomes 0 when the internal loops reach their proper time constants, indicating that the output frequency and 1 PPS signals are now fully operational and meeting their specifications. Under the worst conditions, the Receiver may take up to 24 hours to achieve $\text{FFOM} = 0$. FFOM can be monitored in the Reference Outputs quadrant of the Receiver Status screen (see Figure 3-1 in Chapter 3, “Using the Receiver Status Screen,” of this guide). Also, using the appropriate SCPI query command will provide FFOM value (refer to the Chapter 4, “HP Z3801A Command Listing and Status Information,” in this guide for specifics).

The Receiver is designed to automatically detect and acquire satellites in order to begin providing precise frequency and time information. Until such acquisition is complete and the instrument is locked with $\text{FFOM} = 0$, the signals produced on the rear panel are not precise.

Holdover Description

If the GPS signal is interrupted, the Receiver enters an intelligent holdover mode that uses HP SmartClock® technology.

HP SmartClock takes over control of the quartz oscillator that has been steered to the GPS reference during locked operation.

HP SmartClock predicts the performance of the quartz oscillator based on the information gathered during the “learning period” (locked to GPS). Corrections are automatically issued over time, keeping the performance of the quartz oscillator as close as possible to the performance achieved while locked to the GPS reference signal.

Holdover frequency is maintained to better than $<1 \times 10^{-9}$ per day. The time specifications 1 μ s locked, and 7 μ s unlocked for 24 hours. When the GPS reference signal is restored, the Receiver automatically switches back to normal mode of operation.

In Case of a Problem

Hours after powerup, Receiver not establishing GPS lock

Symptom Date, time, and position still show power-up defaults, or these parameters are incorrect.

Receiver Position Mode = Survey.

Receiver cycling from one set of satellites to another.


No satellites consistently tracked.

Solution Check antenna:

- Verify antenna has an unobstructed view of the sky — antenna is not under or beside an impervious object.
- Verify antenna is connected.
- Verify antenna is connected properly:
 - cable run not too long.
 - cable with antenna attached neither shorted nor open.
- Verify antenna is being properly driven — *Hint*:
 - (1) connect Tee-connector to Receiver's rear-panel **ANTENNA J1** input; connect antenna cable to one end of Tee. Measure a little less than +5 Volts from the other end of the Tee using a digital voltmeter (DVM) as shown in Figure 2-1. If your reading is a lot less than +5 Volts, you will have to determine if the line amplifier or lightning arrester is at fault by using conventional troubleshooting isolation techniques. If the line amplifier and lightning arrester are good, then the antenna may be faulty.
 - (2) If the Receiver +5 Volts is okay, check +5 Volts at the antenna end of the cable with a voltmeter connected between the center conductor and shell. If insufficient voltage is present, it may indicate that the shield of the cable is not making adequate contact to one of the cable connectors.
- After the antenna connection has been verified, cycle power on the Receiver to facilitate rapid recovery from the fault.

In Case of a Problem**NOTE**

Remove the Tee connector and restore antenna connection as loading of the Tee connector will prevent proper reception of the GPS signal by the antenna.

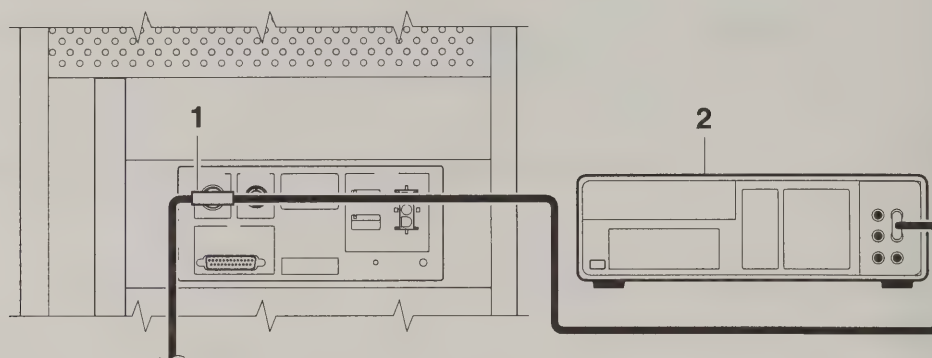

1 Tee-connector

2 DVM

Figure 2-1. Measuring +5 Volts Across Antenna Input

Symptom Same as previous symptoms, except Receiver Position Mode = Hold.

Solution Enable SURVEY mode using specified command.

Receiver not maintaining GPS lock

Symptom Position data incorrect.

Solution Survey to obtain correct position,
or
Correct position data using specified command.

Symptom Position data correct.
Sufficient satellites in view.
No satellites tracked.

Solution If candidate satellites are marked "Ignore" on status screen, disable the feature which ignores satellites.

If candidate satellites are below the mask angle specified on Receiver Status screen, reset the elevation mask angle. Default is 10 degrees — all satellites between the horizon and 10 degrees of the horizon are masked

Chapter Contents

This chapter provides a tutorial section on how to use the Receiver Status screen, a comprehensive reference information section, and an illustrated foldout of the Receiver Status screen, which is a comprehensive summary of key operation conditions and settings.

This chapter is organized as follows:

- Using and Reading the Receiver Status Screen page 3-3
 - Tutorial on Using the Status Screen to Interface With the HP GPS Receiver page 3-3
 - Demonstration of Holdover Operation page 3-8
- Receiver Status Screen Data page 3-11
 - SYNCHRONIZATION Section of the Module Status Screen page 3-12
 - ACQUISITION Section of the Module Status Screen page 3-14
 - HEALTH MONITOR Section of the Module Status Screen page 3-18
- The Receiver Status Screen at a Glance (foldout) page 3-19

Using and Reading the Receiver Status Screen

As mentioned earlier in this chapter, the Receiver Status screen can be accessed when the HP GPS Receiver is connected to a properly configured terminal or PC. There are two ways to access and use the Receiver Status screen:

- By installing a commercially available terminal emulation program, connecting the HP GPS receiver to a DCE device (Digital Communications Equipment) via the rear-panel **I/O Port 1 J3 RS-422** port using an appropriate (*customer supplied*) system interface cable, and manually sending the `:SYSTEM:STATUS?` query. (Refer to Chapter 1, “Getting Started,” in this guide.)
- By installing and operating the HP SatStat program which automatically generates continual status screen updates, and connecting the HP GPS Receiver to a PC via the rear-panel **I/O Port 1 J3 RS-422** port using an appropriate (*customer supplied*) system interface cable. (Refer to the sections titled “Installing the Automated HP SatStat Program for Continual Status Updates” and “Operating the Automated HP SatStat Program” in Chapter 1, “Getting Started,” of this guide for details on installation.)

The following tutorial demonstrates how you can use the Receiver Status screen to observe HP GPS Receiver operation. The tutorial uses the manual `:SYSTEM:STATUS?` method.

Tutorial on Using the Status Screen to Interface With the Receiver

Type `:SYSTEM:STATUS?` at the **scpi>** prompt.

An initial power-up screen is displayed, which is similar to the demonstration screen shown in Figure 3-1. The first data that you should look at is in the SYNCHRONIZATION area of the screen. It is telling you that it is in the Power-up state as indicated by the **>>** marker. That is, the Receiver has just been put on line.

Using and Reading the Receiver Status Screen

```

----- Receiver Status -----
SYNCHRONIZATION ..... [ Outputs Invalid ]
SmartClock Mode      Reference Outputs
  Locked              TFOM      9          FFOM      3
  Recovery            1PPS TI  --
  Holdover            HOLD THR 1.000 us
>> Power-up:GPS acquisition  Holdover Uncertainty
                               Predict  --

ACQUISITION ..... [GPS 1PPS Invalid]
Satellite Status      Time
Tracking: 0           Not Tracking: 6      UTC      12:00:00[?] 01 JAN 1996
                   PRN  El  Az             GPS 1PPS Invalid:not tracking
                   *1  --  ---             ANT DLY  0 ns
                   *6  --  ---             Position
                   *9  --  ---             MODE      Survey: 0% complete
                   *14 --  ---             Suspended:Track <4 sats
                   *22 --  ---             INIT LAT N   0:00:00.000
                   *24 --  ---             INIT LON W   0:00:00.000
ELEV MASK 10 deg     *attempting to track   INIT HGT              0 m (MSL)
HEALTH MONITOR ..... [ OK ]
Self Test: OK  Int Pwr: OK  Oven Pwr: OK  OCXO: OK  EFC: OK  GPS Rcv: OK

```

Figure 3-1. Receiver Status Screen at Powerup

The ACQUISITION area of the screen is telling you that no satellites have been tracked. The identification numbers of several satellites appear in the Not Tracking column. The asterisk next to the satellite identification number, or pseudorandom noise code (PRN), indicates the Receiver is attempting to track it.

The current time and date are shown in the Time quadrant of the ACQUISITION area. The default power-up setting, indicated by [?], is corrected when the first satellite is tracked. Since the Receiver is not tracking any satellites, the GPS 1 PPS reference signal is invalid.

An accurate position is necessary to derive precise time from GPS. The Position quadrant indicates that the Receiver is in survey mode, which uses GPS to determine the position of the GPS antenna. This process has not yet started, since position calculations can be performed only while tracking four or more satellites. INIT LAT, INIT LON, and INIT HGT are the initial estimate of the true position. These coordinates are refined by the survey process. The Receiver uses this position and the time-of-day to select satellites to track. Therefore, you can reduce satellite acquisition time by specifying an close approximation of position and time.

Now, let's send the :SYSTEM:STATUS? query again to see what kind of progress the Receiver has made.

Using and Reading the Receiver Status Screen

You can now see that the Receiver is tracking several satellites as shown in Figure 3-2. The process of acquiring and tracking satellites is described in the following paragraphs.

----- Receiver Status -----									
SYNCHRONIZATION					[Outputs Valid/Reduced Accuracy]				
SmartClock Mode					Reference Outputs				
>> Locked to GPS: stabilizing frequency					TFOM	6	FFOM	1	
Recovery					1PPS TI +71 ns relative to GPS				
Holdover					HOLD THR 1.000 us				
Power-up					Holdover Uncertainty				
					Predict --				
ACQUISITION[GPS 1PPS Valid]				
Satellite Status					Time				
Tracking: 5					Not Tracking: 4				
PRN	El	Az	SS		PRN	El	Az		
2	70	337	134		9	11	292		
7	46	188	117		16	24	243		
15	33	82	54		*26	Acq..			
19	28	113	29		31	--	---		
22	65	91	128						
ELEV MASK 10 deg					*attempting to track				
HEALTH MONITOR [OK]				
Self Test: OK					Int Pwr: OK				
					Oven Pwr: OK				
					OCXO: OK				
					EFC: OK				
					GPS Rcv: OK				

Figure 3-2. Receiver Status Screen Displaying Initial Satellite Acquisition

An asterisk (*) next to the PRN of a satellite in the Not Tracking column indicates the Receiver is attempting to track it. The elevation (El) and azimuth (Az) angles of the satellite are indicated. Acq . or Acq .. tell you that the Receiver is attempting to track that satellite. One dot after the Acq indicator shows that the Receiver is attempting to acquire its signal, and two dots indicate impending lock. Eventually, you will see the satellite move from the Not Tracking column, which shows the satellite PRN, the elevation angle of the satellite in the sky (90° being zenith), the azimuth angle (number of degrees bearing from true north), and the signal strength (SS). A good signal strength is a number above 20, which would be efficient for the Receiver to operate. Numbers below 20, suggest intermittent tracking of the satellite or no tracking; check your antenna system should this be the case.

As indicated by the demonstration screen in Figure 3-2, the Receiver is now surveying for position. It is tracking four satellites which is the minimum number that must be tracked to determine position. As you can see, the Position MODE line indicates survey is 1.2% complete. A complete survey would take two hours during which four satellites or more are continuously tracked.

Using and Reading the Receiver Status Screen

Also, you can see the initial (estimated) position has been replaced with a computed position, which the Receiver continuously refines until it gets a very accurate position. The status screen indicates that a computed position is being used by displaying the averaged latitude, and longitude height (AVG LAT, AVG LON, and AVG HGT).

If the position were not precise, GPS timing information would be inaccurate by an amount corresponding to the error in the computed position. An error in the computed position of the antenna translates into an error in the derived time and will compromise the Receiver's ability to be a timing source.

Let's consider a case where four satellites are not visible at powerup because of a poor antenna location, such as an "urban canyon" (located between tall city buildings). If accurate position is known from a Geodetic survey of that site, it can be programmed with the position command, thereby bypassing the survey operation. This is useful when four satellites cannot be tracked for an extended period of time.

Let's send the :SYSTEM:STATUS? query again to observe the current status of the Receiver.

The updated demonstration status screen in Figure 3-3 indicates that the position survey is now 5.4% complete. Thus, the survey task is beginning to iterate toward an accurate position. In the Time quadrant, the UTC time is now correct. The date is correct, and the GPS reference signal is synchronized to UTC.

Chapter 3 Using the Receiver Status Screen

Using and Reading the Receiver Status Screen

```

----- Receiver Status -----
SYNCHRONIZATION .....[ Outputs Valid/Reduced Accuracy ]
SmartClock Mode _____ Reference Outputs _____
>> Locked to GPS: stabilizing frequency TFOM      4          FFOM      1
Recovery                      1PPS TI +20 ns relative to GPS
Holdover                      HOLD THR 1.000 us
Power-up                      Holdover Uncertainty _____
                              Predict 432.0 us/initial 24 hrs

ACQUISITION .....[GPS 1PPS Valid]
Satellite Status _____ Time _____
Tracking: 6          Not Tracking: 1
PRN  El  Az  SS      PRN  El  Az      UTC      18:47:07   31 Jan 1996
  2   70 301 82      16  13 258      GPS 1PPS Synchronized to UTC
  7   35 186 71      ANT DLY 0 ns
19   40 102 61      Position _____
22   71  60 84      MODE      Survey: 5.4%   complete
26   19 317 54      AVG LAT  N 37:19:34.937
31   16  41 52      AVG LON  W 121:59:50.457
ELEV MASK 10 deg      AVG HGT      +67.94 m (MSL)
HEALTH MONITOR .....[ OK ]
Self Test: OK Int Pwr: OK Oven Pwr: OK OCXO: OK EFC: OK GPS Rcv: OK

```

Figure 3-3. Receiver Status Screen Displaying Progress Towards Steady-State Operation

In the SYNCHRONIZATION area, the >> marker is pointed at the Locked to GPS line, indicating that the Receiver is locked to GPS and stabilizing the frequency of its oscillator. This means that the Receiver has phase-locked its oscillator to the 1 PPS reference signal provided by GPS, but it is not at its final, or most stable, state. The Receiver is locked and the front-panel **GPS Lock** LED is illuminated.

For users without the command interface (PC/Terminal emulator connected to the Receiver), the illuminated **GPS Lock** LED is probably the first indication that after powerup that the Receiver is moving towards a stable state.

With the command interface and status screen, you can get more detailed information. For example, you can read the reference outputs quality indicators in the Reference Outputs area of the status screen. These are the Time Figure of Merit (TFOM) and Frequency Figure of Merit (FFOM) indicators. As shown in Figure 3-3, the TFOM is 4 and the FFOM is 1. These values will eventually decrease towards the ultimate values that represent steady-state performance. Refer to the subsection titled “Reference Outputs,” on page 3-13 in this chapter for more information about TFOM and FFOM.

Using and Reading the Receiver Status Screen

Also indicated is a prediction of the accuracy of the Receiver should it go into holdover operation.

Demonstration of Holdover Operation

CAUTION

The Receiver typically reaches stable state 24 hours after powerup, and it will learn best if its experiences no holdover in the first 24 hours. Therefore, the holdover demonstration in the following paragraphs will compromise the Receiver's ability to learn the characteristics of its internal reference oscillator. For the purpose of education only, you will be shown how to initiate a holdover.

A user should *never* initiate holdover during the first 24 hours while the Receiver is learning its internal oscillator characteristics. The Receiver should maintain GPS lock during this time because it is using the GPS signal to discipline the oscillator. It will learn what the oscillator drift characteristics are relative to the GPS signal. It will learn how the oscillator ages, and the software will learn how to compensate for that aging.

Thus, it is recommended that the Receiver is always kept locked to GPS during the first 24 hours.

For demonstration purposes, and since the Receiver has been powered up for a while, let's put the Receiver into holdover by simply removing the antenna connection. (*Note that holdover also can be manually initiated by sending the SYNCHRONIZATION:HOLDOVER:INITIATE command; however, for this demonstration, disconnect the antenna cable.*) The following will occur :

- The front-panel **Holdover** LED will illuminate, and
- after sending the :SYSTEM:STATUS? query again, a screen similar to Figure 3-4 should appear.

Let's send the :SYSTEM:STATUS? query. Figure 3-4 should appear.

Using and Reading the Receiver Status Screen

----- Receiver Status -----									
SYNCHRONIZATION					[Outputs Valid/Reduced Accuracy]				
SmartClock Mode					Reference Outputs				
Locked to GPS					TFOM	3		FFOM	2
Recovery					1PPS TI	--			
>> Holdover: GPS 1PPS invalid					HOLD THR	1.000 us			
Power-up					Holdover Uncertainty				
Holdover Duration: 0m 14s					Predict	432.0 us/initial 24 hrs			
					Present	1.0 us			
ACQUISITION					[GPS 1PPS Invalid]				
Satellite Status					Time				
Tracking: 0					UTC	20:56:14	31 Jan 1996		
Not Tracking: 7					GPS 1PPS	Inaccurate: not tracking			
PRN El Az PRN El Az					ANT DLY	0 ns			
*2 71 316 *31 12 29					Position				
*7 41 186					MODE	Survey: 71.1% complete			
15 11 86									
*19 35 107					LAT	N 37:19:32.472			
*22 68 78					LON	W 121:59:51.784			
*26 23 314					HGT	+42.19 m (MSL)			
ELEV MASK 10 deg *attempting to track									
HEALTH MONITOR					[OK]				
Self Test: OK Int Pwr: OK Oven Pwr: OK					OEXO: OK	EFC: OK	GPS Rcv: OK		

Figure 3-4. Receiver Status Screen Displaying Holdover Operation

In the SYNCHRONIZATION area, you can see that the Receiver has gone into holdover as indicated by >> marker that is pointing at the Holdover line. The status screen indicates that the reason the Receiver is in holdover is because the GPS 1 PPS reference signal is invalid.

You would expect this since the antenna has been disconnected.

The status screen shows, instantaneously, loss of the GPS signal. As you can see on the screen, all of the satellites in the Tracking column moved into the Not Tracking column.

The status screen in Figure 3-4 shows that the Receiver has been in holdover operation for 14 seconds.

If the Receiver HP SmartClock had had enough time to learn the internal oscillator characteristics (24 hours), the Receiver status screen would show that the Receiver went into holdover, and the Receiver's outputs were maintained during holdover by the HP SmartClock.

When the GPS antenna is re-connected and the GPS signal has been re-acquired, the Receiver has the ability to recover from holdover by itself. The SYNCHRONIZATION area of the screen will show the >> marker pointing at the Recovery line (and then eventually at the Locked to GPS line), the GPS Lock LED will illuminate, and the screen will look similar to Figure 3-5.

Using and Reading the Receiver Status Screen

```

----- Receiver Status -----

SYNCHRONIZATION .....[ Outputs Valid/Reduced Accuracy ]
SmartClock Mode _____ Reference Outputs _____
>> Locked to GPS: Stabilizing frequency TFOM 3 FFOM 1
Recovery 1PPS TI +10.6 ns relative to GPS
Holdover HOLD THR 1.000 us
Power-up Holdover Uncertainty _____
Predict 432.0 us/initial 24 hrs

ACQUISITION ..... [GPS 1PPS Valid]
Satellite Status _____ Time _____
Tracking: 6 Not Tracking: 0 UTC 20:59:28 31 Jan 1996
PRN El Az SS GPS 1PPS Synchronized to UTC
2 71 317 80 ANT DLY 0 ns
7 34 185 73 Position _____
19 41 101 64 MODE Survey: 71.4% complete
22 67 80 87 LAT N 37:19:32.486
26 24 312 55 LON W 121:59:52.082
31 12 27 49 HGT +40.06 m (MSL)
ELEV MASK 10 deg HEALTH MONITOR ..... [ OK ]
Self Test: OK Int Pwr: OK Oven Pwr: OK OCXO: OK EFC: OK GPS Rcv: OK

```

Figure 3-5. Receiver Status Screen Following Recovery from Holdover Operation

You can see the Receiver has recovered from holdover almost immediately and it has returned to locked operation.

Receiver Status Screen Data

This section defines the data displayed in the Receiver Status screen, shown in Figure 3-6.

```

----- Receiver Status -----
SYNCHRONIZATION ..... [ Outputs Valid ]
SmartClock Mode .....
>> Locked to GPS
Recovery
Holdover
Power-up
Reference Outputs
TFOM 3 FFOM 0
1PPS TI +7.2 ns relative to GPS
HOLD THR 1.000 us
Holdover Uncertainty
Predict 49.0 us/initial 24 hrs

ACQUISITION .....[GPS 1PPS Valid]
Tracking: 6 _____ Not Tracking: 1 _____
PRN El Az SS PRN El Az
2 49 243 168 14 11 82
16 24 282 125
18 38 154 132
19 65 52 168
27 62 327 246
31 34 61 133
Time _____ +1 leap second pending
UTC 23:59:59 31 Dec 1995
GPS 1PPS Synchronized to UTC
ANT DLY 120 ns
Position
MODE Survey: 17.5% complete

AVG LAT N 37:19:32.264
AVG LON W 121:59:52.112
AVG HGT +41.86 m (MSL)

ELEV MASK 10 deg
HEALTH MONITOR ..... [ OK ]
Self Test: OK Int Pwr: OK Oven Pwr: OK OCXO: OK EFC: OK GPS Rcv: OK

```

Figure 3-6. Sample Status Screen

The status screen has three major sections:

- SYNCHRONIZATION
- ACQUISITION
- HEALTH MONITOR

The SYNCHRONIZATION section of the status screen shows how the HP GPS Receiver's HP SmartClock™ technology is progressing towards its objective, which is to synchronize the Receiver's oscillator to the 1 PPS reference signal produced by the Receiver's internal GPS Engine.

The ACQUISITION section of the status screen shows how the Receiver's internal GPS Engine is progressing towards its objective, which is to produce an accurate internal 1 PPS reference signal. It does so through tracking GPS satellites.

The HEALTH MONITOR section of the status screen summarizes the overall health of the product.

Receiver Status Screen Data**SYNCHRONIZATION Section of the Status Screen*****SYNCHRONIZATION Summary Line***

The **SYNCHRONIZATION** line in the screen summarizes the **SmartClock Status** and **Reference Outputs**. One of three **SYNCHRONIZATION** messages is shown:

<i>Outputs Invalid</i>	while the Receiver (unit) is warming up,
<i>Outputs Valid/ Reduced Accuracy</i>	while the unit is in holdover or is locked but has not achieved steady-state operation, or
<i>Outputs Valid</i>	while the unit is in steady-state operation.

SmartClock Mode

The SmartClock Mode area of the screen shows the four operating modes:

- Locked to GPS
- Recovery
- Holdover
- Power-up

As shown in the sample status screen in Figure 3-6, a >> symbol indicates the current operating mode.

Locked to GPS indicates that the Receiver is locked to GPS. The front-panel **GPS Lock** LED will be illuminated.

When *stabilizing frequency ...* is shown, the time output (1 PPS) signal is locked and can be used, but the frequency outputs (10 MHz) are not at their final or most stable state.

Recovery indicates that the Receiver is actively working to become locked to GPS. All conditions needed to proceed towards a lock have been met. Expect an eventual spontaneous transition to a lock (unless changing external conditions prevent this, such as loss of tracked satellites.)

Holdover indicates that the Receiver is waiting for conditions that are needed to allow the process of recovery from holdover to begin. Once these conditions are met, the Receiver will transition on its own to the recovery mode.

When the *GPS 1PPS CLK invalid* message follows the **Holdover** label, the internal GPS 1 PPS reference signal is inaccurate.

Receiver Status Screen Data

When the *manually initiated* message follows the **Holdover** label, the Receiver has been placed in holdover by the user. An explicit command is required to initiate an exit from manual holdover.

When the *1 PPS TI exceeds hold threshold* message follows the **Holdover** label, the phase difference between the 1 PPS time output signal and the internal GPS 1 PPS reference signal has exceeded the user-entered holdover threshold value.

When the *internal hardware problem* message follows the **Holdover** label, a measurement hardware error exists.

The *Holdover Duration* message indicates the duration that the Receiver has been operating in holdover (and recovery). Thus, this message gives you an assessment of the quality of the outputs. The longer the Receiver is in holdover the more degraded the outputs become.

Power-up indicates that the Receiver hasn't yet achieved GPS lock or acquired satellites since it has been powered up. The Receiver is measuring the internal reference oscillator's frequency and adjusting it to 10 MHz during this power-up period. Other queries can provide insight as to the cause if the Receiver is remaining in powerup longer than expected.

Reference Outputs

TFOM (Time Figure of Merit) indicates the *accuracy* of the Receiver's 1 PPS output. A low TFOM value indicates a more accurate output. In the sample screen of Figure 3-6, a value of 3 is displayed, meaning that the Time Error ranges from 100 to 1000 nanoseconds. The following table lists the TFOM values that could be displayed and the corresponding Time Error.

TFOM Value	Time Error (in nanoseconds)	TFOM Value	Time Error (in nanoseconds)
*0	less than 1	5	$10^4 - 10^5$
*1	1 – 10	6	$10^5 - 10^6$
*2	10 – 100	7	$10^6 - 10^7$
3	100 – 1000	8	$10^7 - 10^8$
4	$10^3 - 10^4$	9	greater than 10^8

*The TFOM values 0, 1, and 2 are not presently used in the Receiver. The Receiver will display TFOM values ranging from 9 to 3, which is consistent with the specified accuracies of each product.

Receiver Status Screen Data

FFOM (Frequency Figure of Merit) indicates the *stability* of the Receiver's 10 MHz output. The 10 MHz output is controlled by the HP SmartClock's Phase-Locked Loop (PLL). Thus, the FFOM value is determined by monitoring the status of the PLL.

In the sample screen of Figure 3-6, the 0 indicates that the HP SmartClock's PLL is stabilized. The following table lists and defines the FFOM values that could be displayed.

FFOM Value	Definition
0	PLL stabilized — 10 MHz output within specification.
1	PLL stabilizing
2	PLL unlocked (holdover) — Initially the 10 MHz output will be within specifications. However, when in holdover, the 10 MHz output will eventually drift out of specification.
3	PLL unlocked (not in holdover) — Do not use the output.

1PPS TI indicates the difference (timing shift) between the HP SmartClock 1 PPS and the internal GPS 1 PPS signals.

HOLD THR (holdover threshold) displays the user-entered time error value.

ACQUISITION Section of the Status Screen***ACQUISITION Line***

The **ACQUISITION** line in the screen summarizes the state of the internal GPS Engine as indicated by the **Tracking**, **Not Tracking**, and **Position** areas of the screen.

If the Receiver Engine was considered to be synchronized to the GPS signal, the [*GPS 1 PPS Valid*] message will appear at the end of the **ACQUISITION** line. If the Receiver has not yet synchronized to GPS, the [*GPS 1 PPS CLK Invalid*] message will be displayed.

Tracking, Not Tracking

The **Tracking** table indicates the number of satellites the unit is tracking.

The **Not Tracking** table indicates satellites predicted to be visible that are not tracked, and all of the satellites that are assigned to a GPS Engine channel but are not currently tracked.

Receiver Status Screen Data

Health and status indicators in the tables are defined as follows:

PRN	indicates the pseudorandom noise code assigned to the satellite.
EI	indicates the predicted elevation angle, from a range of 0 to 90°. The predicted elevation is derived from the almanac.
--	indicates that the elevation angle is unknown (the almanac did not provide this data).
Az	indicates the predicted azimuth angle, from a range of 0 to 359°. The predicted azimuth angle is referenced to true north, and is derived from the almanac.
---	indicates that the azimuth angle is unknown (the almanac did not provide this data).
SS	indicates the strength of the signal, from a range of 0 to 255. A signal strength of 20 to 30 is a weak signal that may not be acquired by the Receiver.

The health and status indicators in the **Not Tracking** table are described as follows:

<i>Ignore</i>	indicates that the user has chosen to exclude this satellite from a list of satellites available for tracking.
<i>Not OK</i>	indicates GPS has reported that this satellite is unhealthy.
<i>Acq</i>	indicates the unit is attempting to acquire the satellite signal.
<i>Acq.</i>	indicates the unit is reading timing information from the satellite.
<i>Acq..</i>	indicates the unit is reading satellite orbital information.

Receiver Status Screen Data

ELEV MASK indicates the elevation mask angle in degrees. Satellites at or above this elevation angle are considered for tracking.

**attempting to track* indicates that the unit is attempting to track a satellite.

Time

When you first power up the unit the time and date that is stored in the internal GPS Engine may not be the actual date. The actual time and date will be valid after one satellite has been tracked by the Receiver.

NOTE

There are two accurate ways to express time (GPS or UTC). GPS time is offset from UTC time by the number of accumulated leap seconds since midnight of January 6, 1980 UTC.

The **Time** area of the status screen provides three types of information: **Time**, **1PPS CLK**, and **ANT DLY**.

Time has four possible modes: *GPS*, *UTC*, *LOCL GPS*, and *LOCAL*.

GPS indicates current time and date collected from a satellite in GPS Time.

LOCL GPS indicates GPS Time, offset for the local time zone.

UTC indicates current time and date collected from a satellite in UTC time.

LOCAL indicates current time and date collected from a satellite offset from UTC for the local time zone.

1PPS CLK can indicate several possible advisory messages. These messages are:

Synchronized to GPS Time 1 PPS locked to GPS, referenced to GPS Time.

Synchronized To UTC 1 PPS locked to GPS, referenced to UTC.

Assessing stability ... applying hysteresis to locked 1 PPS signal.

Inaccurate, not tracking not tracking satellites.

Receiver Status Screen Data

<i>Inaccurate, inacc position</i>	in survey mode, but has not yet calculated a position.
<i>Absent or freq incorrect</i>	no 1PPS signal; or the internal GPS Engine is idle.

ANT DLY (antenna delay) displays the user-entered value that is used to compensate for the propagation delay of the antenna cable.

Position

Position area of the status screen provides four types of information: **MODE** (hold or survey), **LAT** (latitude), **LON** (longitude), and **HGT** (height).

MODE indicates whether the unit is set to Hold or Survey position mode.

When *Hold* is displayed, the unit's antenna position has been provided by the user, or the average position has been found after completion of survey.

If the unit is in the position *Hold* mode, the **LAT**, **LON**, and **HGT** "held" position coordinates will be displayed.

If *Survey*: *57.3% complete* is displayed, for example, the Receiver is set to survey mode trying to determine the position of the antenna. The % value indicates the progress of the surveying.

At the beginning of a survey (0% completion), the following "estimated" position coordinates will be displayed:

INIT LAT indicates the estimated latitude (North or South) position of the unit in degrees, minutes, and seconds.

INIT LON indicates the estimated longitude (East or West) position of the unit in degrees, minutes, and seconds.

INIT HGT indicates estimated height of the unit's antenna, in meters above mean sea level (MSL).

Once survey starts, the following "averaged" position coordinates will be displayed:

AVG LAT indicates the average latitude (North or South) position of the unit in degrees, minutes, and seconds.

Receiver Status Screen Data

AVG LON indicates the average longitude (East or West) position of the unit in degrees, minutes, and seconds.

AVG HGT indicates average height of the unit's antenna, in meters above mean sea level (MSL).

The possible advisory messages that can be displayed when position mode is Survey are:

Suspended: track <4 sats

Suspended: poor geometry

Suspended: no track data

HEALTH MONITOR Section of the Screen

The HEALTH MONITOR section of the status screen reports errors or failures of the key hardware functions. The *OK* summary message at the end of the **HEALTH MONITOR** line indicates that no errors or failures were detected. *Error* indicates that one or more hardware tests failed.

For each hardware function, *OK* is reported when it is operating normally; *Err* is displayed when a failure or an error is detected.

Hardware functions are monitored periodically, with the exception of Self Test, which is performed at powerup or when requested.

The health and status indicators in the HEALTH MONITOR section are described as follows:

Self Test	Last diagnostic check of the microprocessor system, reference oscillator, satellite receiver, and power supplies failed.
Int Pwr	Internal power supply voltage(s) exceeds tolerance.
Oven Pwr	Oscillator oven power supply voltage exceeds tolerance.
OCXO	Oscillator output failed
EFC	Oscillator control voltage is at or near full-scale.
GPS Rcv	Satellite receiver communication failed, or GPS 1PPS reference is absent.



SYNCHRONIZATION

SYNCHRONIZATION profiles the process of synchronizing time and frequency reference signals with GPS.

HP SmartClock technology compares and adjusts (locks) reference oscillator to GPS. In the absence of GPS, HP SmartClock operates in "holdover" mode, which maintains precise time and frequency over an extended duration by predicting and compensating for aging and temperature effects.

SmartClock Mode

Locked to GPS

Reference signals are synchronous with GPS. When status frequency is reported, short-term frequency errors limit the accuracy of the 10-MHz reference.

Recovery: ...

Adjusting the frequency and phase of the oscillator to correct errors accrued while in holdover operation. The phase difference between the GPS 1PPS reference and disciplined oscillator 1PPS signal is shown.

Holdover: ...

Reference outputs are not synchronous with GPS due to holdover condition. HP SmartClock maintains timing accuracy by applying learned oscillator characteristics.

GPS 1PPS invalid

Not tracking any satellites, or position is inaccurate

1PPS TI exceeds hold threshold

Phase difference between 1PPS signals exceeds a specified limit (**HOLD THR**)

manually initiated

User-initiated holdover.

Holdover Duration is the cumulative duration of holdover recovery operations.

Power-up: ...

Warm-up/initial adjustment of the oscillator.

Reference Outputs

Measures of signal quality:

TFOM (Time Figure of Merit)

Accuracy of the 1PPS reference. A number between 0 and 9 that denotes a timing error of $10^{\text{TFOM}-1}$ to 10^{TFOM} nanoseconds.

FFOM (Frequency Figure of Merit)

Frequency stability of the 10-MHz reference:

- 0 — Stable, signal within specification
- 1 — Stabilizing this signal
- 2 — Holdover mode; frequency will drift
- 3 — Signal is unusable.

1PPS TI (Time Interval)

Average phase difference between the GPS reference and oscillator 1PPS signals.

HOLD THR (Holdover Threshold)

1PPS phase difference that while exceeded forces holdover operation.

ACQUISITION

ACQUISITION profiles the process of acquiring precise time from GPS. GPS provides time-of-day information and a 1PPS reference signal used to discipline the internal oscillator.

Time of day:

- TIME** — Coordinated Universal Time
- LOCAL** — UTC with local time zone offset
- GPS** — GPS Time
- GPS TIME** — GPS Time, with time zone offset.

Identifies a default power-up setting that is corrected when the first satellite is tracked.

Leap second pending is reported if a leap second correction to UTC is pending.

1PPS indicates the validity of the GPS 1PPS reference:

- 0 — Not synchronized to UTC (or GPS Time)
- 1 — GPS reference is synchronous with GPS
- 2 — Questionable accuracy...
- 3 — Questioning stability...
- 4 — 1PPS must be accurate for 35 seconds
- 5 — Accurate: not tracking
- 6 — One or more satellites must be tracked
- 7 — Accurate: inaccurate position
- 8 — Position must be known to derive time
- 9 — Accurate: Time RAIM error
- 10 — GPS timing integrity is suspect.

DELTA offsets the GPS 1PPS reference to compensate for propagation delays introduced by the antenna system. Delta is referenced to the position of the antenna.)

Position

An accurate position is necessary to transfer time from GPS. Position **MODEs** are provided, hold and survey.

In hold mode, a fixed position is used to derive time. This position must be specified if known, or determined by the survey process.

In survey mode, position is determined from GPS. Four or more satellites must be tracked. Successive positional estimates (differences) are refined to obtain the true position, which is used as the held position at the completion of this process.

Averaged (AVG) position coordinates and progress are reported during surveying. When surveying is suspended, an advisory message describes the reason:

Suspended: track < 4 sats

Four or more satellites must be tracked to determine position

Suspended: poor geometry

Position Dilution of Precision (PDOP) is too large for an accurate pseudorange measurement.

Specifying an approximate initial (INIT) position will reduce satellite acquisition time.

Receiver Status Screen Data

AVG LON indicates the average longitude (East or West) position of the unit in degrees, minutes, and seconds.

AVG HGT indicates average height of the unit's antenna, in meters above mean sea level (MSL).

The possible advisory messages that can be displayed when position mode is Survey are:

Suspended: track <4 sats

Suspended: poor geometry

Suspended: no track data

HEALTH MONITOR Section of the Screen

The HEALTH MONITOR section of the status screen reports errors or failures of the key hardware functions. The *OK* summary message at the end of the **HEALTH MONITOR** line indicates that no errors or failures were detected. *Error* indicates that one or more hardware tests failed.

For each hardware function, *OK* is reported when it is operating normally; *Err* is displayed when a failure or an error is detected.

Hardware functions are monitored periodically, with the exception of Self Test, which is performed at powerup or when requested.

The health and status indicators in the HEALTH MONITOR section are described as follows:

Self Test	Last diagnostic check of the microprocessor system, reference oscillator, satellite receiver, and power supplies failed.
Int Pwr	Internal power supply voltage(s) exceeds tolerance.
Oven Pwr	Oscillator oven power supply voltage exceeds tolerance.
OCXO	Oscillator output failed
EFC	Oscillator control voltage is at or near full-scale.
GPS Rcv	Satellite receiver communication failed, or GPS 1PPS reference is absent.

The Receiver Status Screen at a Glance



SYNCHRONIZATION

SYNCHRONIZATION profiles the process of synchronizing time and frequency reference signals with GPS.

HP SmartClock technology compares and adjusts (locks) the reference oscillator to GPS. In the absence of GPS, HP SmartClock operates in "holdover" mode, which maintains precise time and frequency over an extended duration by predicting and compensating for aging and temperature effects.

SmartClock Mode

Locked to GPS

Reference signals are synchronous with GPS. When stabilizing frequency is reported, short-term frequency errors limit the accuracy of the 10-MHz reference.

Recovery: ...

Adjusting the frequency and phase of the oscillator to correct errors accrued while in holdover operation. The phase difference between the GPS 1PPS reference and disciplined oscillator 1PPS signal is shown.

Holdover: ...

Reference outputs are not synchronous with GPS due to the reported condition. HP SmartClock maintains timing accuracy by applying learned oscillator characteristics.

GPS 1PPS invalid

Not tracking any satellites, or position is inaccurate

1PPS TI exceeds hold threshold

Phase difference between 1PPS signals exceeds a specified limit (**HOLD THR**)

manually initiated

User-initiated holdover.

Holdover Duration is the cumulative duration of holdover and recovery operations.

Power-up: ...

Warm-up/initial adjustment of the oscillator.

Reference Outputs

Measures of signal quality:

TFOM (Time Figure of Merit)

Accuracy of the 1PPS reference. A number between 0 (best) and 9 that denotes a timing error of 10^{TFOM-1} to 10^{TFOM} nanoseconds.

FFOM (Frequency Figure of Merit)

Frequency stability of the 10-MHz reference:

0 — Stable, signal within specification

1 — Stabilizing this signal

2 — Holdover mode; frequency will drift

3 — Signal is unusable.

1PPS TI (Time Interval)

Average phase difference between the GPS reference and oscillator 1PPS signals.

HOLD THR (Holdover Threshold)

1PPS phase difference that while exceeded forces holdover operation.

Receiver Status									
SYNCHRONIZATION					[Outputs Valid/Reduced Accuracy]				
SmartClock Mode					Reference Outputs				
Locked					TFOM	3	FFOM	2	
>> Recovery: phase alignment [TI +1.296 us]					1PPS TI	--			
Holdover					HOLD THR	1.000 us			
Power-up					Holdover Uncertainty				
					Predict	55.8 us/initial	24 hrs		
					Present	1.0 us			
Holdover Duration: 1m 45s									
ACQUISITION					[GPS 1PPS Valid]				
Tracking: 1					Time				
PRN	El	Az	SS		UTC	03:11:57	31 Jan 1996		
31	75	254	168		GPS 1PPS	Synchronized to UTC			
					ANT DLY	120 ns			
					Position				
					MODE	Survey: 26.1% complete			
						Suspended: track <4 sats			
					AVG LAT	N 37:19:31.797			
					AVG LON	W 121:59:52.018			
					AVG HGT	60.52 m (MSL)			
ELEV MASK 10 deg									
HEALTH MONITOR					[OK]				
Self Test: OK					Int Pwr: OK				
					Oven Pwr: OK				
					OCXO: OK				
					EFC: OK				
					GPS Rcv: OK				



HEALTH MONITOR

HEALTH MONITOR reports the operational status of key receiver components and internal signals.

Self Test — Result of the last diagnostic check of the processor system, reference oscillator, satellite receiver and power supplies

Int Pwr — Internal power supplies

Oven Pwr — Oscillator oven power supply

OCXO — Oscillator 1PPS output

EFC — Oscillator frequency control voltage

GPS Rcv — Satellite receiver communication interface.

Holdover Uncertainty

Estimations of timing accuracy while in holdover mode, which reflect the extent to which HP SmartClock has learned the oscillator's characteristics:

Predict

Maximum timing error that can be expected over the initial 24 hours of holdover operation.

Present

Maximum timing error currently expected.

Tracking

Satellites currently tracked by the receiver. Four or more satellites must be tracked to determine position. Timing information is derived from all tracked satellites, and is considered accurate while tracking at least one satellite from a known position. The receiver selects satellites highest in the sky that are at or above the minimum elevation angle specified by **ELEV MASK**.

Not Tracking

Satellites considered for tracking. These satellites are predicted to be visible or are selected by the "sky search" algorithm. Visibility is predicted from the satellite almanac, current time and position.

Tracking and Not Tracking tables provide supplemental information about satellite position, signal strength and health:

PRN	— Identification number (pseudorandom noise code) assigned to the satellite. Satellites are sorted by ascending PRNs.
El	— Elevation of the satellite (degrees) predicted by the almanac. "—" denotes it is unknown, such as when the satellite is not predicted to be visible but is selected for tracking by the sky search algorithm.
Az	— Azimuth of the satellite (degrees), referenced to true north, predicted by the almanac; "—" if unknown.
SS	— Relative signal strength, proportional to the signal-to-noise ratio of the received signal. The maximum value is 255; 20 to 30 is the minimum range for stable tracking.
Acq	— Locking code and carrier tracking loops to initially acquire the satellite signal.
Acq .	— Demodulating the satellite broadcast (NAV) message, and determining current time.
Acq ..	— Reading the satellite ephemeris (orbital information) from the NAV message.
Ignore	— The satellite is excluded from the selection process.
Not OK	— GPS or Time RAIM reports the satellite is unhealthy.



ACQUISITION

ACQUISITION profiles the process of acquiring precise time from GPS. GPS provides time-of-day information and a 1PPS reference signal used to discipline the internal oscillator.

Time

Time of day:

- UTC** — Coordinated Universal Time
- LOCAL** — UTC with local time zone offset
- GPS** — GPS Time
- LOCL GPS** — GPS Time, with time zone offset.

[?] identifies a default power-up setting that is corrected when the first satellite is tracked.

+1 (or -1) leap second pending is reported if a leap second correction to UTC is pending.

GPS 1PPS indicates the validity of the GPS 1PPS reference:

Synchronized to UTC (or GPS Time)

— 1PPS reference is synchronous with GPS

Questionable accuracy...

Assessing stability...

— 1PPS must be accurate for 35 seconds

Inaccurate: not tracking

— One or more satellites must be tracked

Inaccurate: inacc position

— Position must be known to derive time

Inaccurate: Time RAIM err

— GPS timing integrity is suspect.

ANT DLY offsets the GPS 1PPS reference to compensate for signal propagation delays introduced by the antenna system. (Time is referenced to the position of the antenna.)

Position

An accurate position is necessary to transfer time from GPS. Two position **MODEs** are provided, hold and survey.

In Hold mode, a fixed position is used to derive time. This position may be specified if known, or determined by the survey process.

In Survey mode, position is determined from GPS. Four or more satellites must be tracked. Successive positional estimates (pseudoranges) are refined to obtain the true position, which is entered as the held position at the completion of this process.

Averaged (AVG) position coordinates and progress are reported while surveying. When surveying is suspended, an advisory message describes the reason:

Suspended: track <4 sats

— Four or more satellites must be tracked to determine position

Suspended: poor geometry

— DOP (dilution of precision) is too large for an accurate pseudo-range measurement.

Specifying an approximate initial (**INIT**) position will reduce satellite acquisition time.

Chapter Contents

This chapter provides a description of each command that can be used to operate the HP Z3801A GPS Receiver.

This chapter is organized as follows:

- HP Z3801A Commands page 4-3
 - SCPI Conformance Information page 4-3
 - SCPI Syntax Conventions page 4-3
- Status Information page 4-9
 - Operation Status Register Bit Assignments page 4-11
 - Holdover Status Register Bit Assignments page 4-11
 - Hardware Status Register Bit Assignments page 4-12
- Information that Appears in the Diagnostic Log page 4-12
- Model for Powerup, Locked, and Holdover States page 4-13
- Error Messages page 4-15

HP Z3801A Commands

SCPI Conformance Information

The Standard Commands for Programmable Instruments (SCPI) commands used in the HP Z3801A are in conformance with the SCPI Standard Version 1994.0.

SCPI Syntax Conventions

[] An element inside brackets is optional. Note, the brackets are NOT part of the command and should NOT be sent to the Receiver.

1 | 2 Means use either 1 or 2.

<numeric_value> Means enter a number.

SENSE Means you MUST use either all the upper case letters or the entire word. The lower case letters are optional. For example, SENS and SENSE are both valid. However, SEN is not valid. (Note SENSE is used here as an example, but this convention is true for all SCPI commands.) In other words, the short form of the keywords is shown in uppercase.

<n> the notation <n> ending a command keyword indicates a numeric suffix, used to differentiate multiple instances of the same structure. The numeric suffix is applied to both the short and long forms. The valid range for the value n is specified from an enumerated list, for example [1 | 2 | 3], or from a range, for example [1..3] to indicate any of the integers from 1 to 3.

NOTE

When you see quotation marks in the command's parameter you must send the quotation marks with the command.

HP Z3801A Commands

Two command tables are provided:

- Table 4-1, which lists the “INSTALL” language commands (used to download firmware).
- Table 4-2, which lists the “PRIMARY” language commands (used for normal instrument operation).

Table 4-1. HP Z3801A INSTALL Commands

Keyword/Syntax	Parameters/ Responses	Comments
*CLS		Clear errors
*IDN?	returns unquoted string	Identify revision of download control firmware
DIAGnostic		Node Only. "INSTALL" language is used for downloading firmware
:DOWNload		Send down a Motorola S-Record
:ERASe		Erase Flash
:SYSTem		Node Only.
:ERRor?	returns INT, quoted string	first parameter is error number, quoted string is error description.
:LANGuage	"PRIMARY" "INSTALL"	Use "PRIMARY" to switch to normal operation commands.

Table 4-2. HP Z3801A PRIMARY Commands

Keyword/Syntax	Parameters/ Responses	Comments
*CLS		Clears event status registers and error queue.
*ESE	<mask value>	Sets or returns standard event status enable register
*ESR?	returns register value	Returns & Clears standard event status register
*IDN?	returns unquoted string	Returns identification string.
*SRE	<mask value>	Sets or returns service request enable register
*STB?	returns INTEGER	Returns the value of the Status Byte
*TST?	returns INTEGER	Runs self tests. 0 = passed, non-zero is test specific code

Table 4-2. HP Z3801A PRIMARY Commands (Continued)

Keyword/Syntax	Parameters/ Responses	Comments
DIAGnostic		Node Only
:LCOunt?	returns 32-bit integer	Returns lifetime count, indicating total powered on time.
:LOG		Node Only. See list of log messages later in this document.
:CLEar	[<log count>]	Clears the log. The optional log count parameter is provided to ensure that no log entries are unread at the time of the clear. If value sent in doesn't match current log entry count (Use :DIAG:LOG:COUN? to obtain this number.), the clear will not take place.
:COUNT?	returns INTEGER	Identifies number of entries in log.
[:READ]? [<numeric>]	send: [<numeric>] returns: quoted string	Outputs single log entry. Optional numeric parameter can be used to identify a specific log entry. If no numeric is provided, will output most recent log entry.
:ROSCillator		Node Only
:EFControl		
[RELative]?	returns INTEGER in %	Outputs EFC value in %, range -100% to +100%. Note DIAG:ROSC:EFC? will give same response.
:SERial		Node Only
:LRMunit?	returns unquoted string	Queries the last response item. Used when transmission error has occurred.

HP Z3801A Commands

Table 4-2. HP Z3801A PRIMARY Commands (Continued)

Keyword/Syntax	Parameters/Responses	Comments
:LED		Node Only
:ACTive	0 OFF 1 ON	Sets or queries Active LED
:ALARm?	returns 0 1	Query Alarm LED. Conditions for enabling alarm are determined via LED:ALARM:USER
:USER	0 OFF 1 ON	Provides a way to directly set Alarm.
:ENABLEd	0 OFF 1 ON	Sets or queries Enabled LED
:GPSLock?	returns 0 1	Queries Lock LED
:HOLDover?	returns 0 1	Queries Holdover LED
[SOURce]:PTIME		Node Only
:FFOMerit?	returns INT	Frequency figure of merit. 0 = no result available.
:GPSSystem		Node Only
:ADELay	<numeric in nanosecs>	Sets antenna delay in nanoseconds. Caution: use of this command while Receiver is in normal locked operation, can cause jump to holdover.
:EMANgle	<numeric in deg>	Sets elevation mask angle in degrees. 90 is straight up.
:INITial		Node Only. By setting all of the commands in this group, faster initial GPS acquisition may occur. Receiver uses initial date, time, position with almanac to predict which sats should be visible. Note that time, & position only have to be approximate for this to speed up acquisition. Acquisition will still occur even if these commands are not used.
:DATE	<yr>,<mo>,<day>	Use to speed up tracking of first satellite. Not queryable.
:TIME	<hr>,<min>,<sec>	Use to speed up tracking of first satellite. Not queryable.
:POSition	<location>	Use to speed up tracking of first satellite. <location> = N S, <hr>, <min>, <sec>,EIW,<hr>,<min>,<sec>,<elevation in m (mean sea level) Not queryable.
:POSition	send: <location> SURVey LAST returns: <location>	Places Receiver in position-hold mode at this location. See above for <location> definition. Currently works for entered location, not if SURV or LAST is used. SURV means to use current survey location estimate, LAST means use last position-hold value. During survey, query returns current survey location estimate.
:HOLD		Node Only
:LAST?	returns location (see definition with :GPS:INIT:POS)	Identifies last hold position. This can be used if the Receiver has been commanded to survey but is making no progress. This query returns the last location.
:SURVey		Node Only
:PROGress?	returns INT in %	During survey, provides % completed (from survey start until automatic transition to position hold)
[:STATE]	send: ONCE returns: ONCE 0	Sets ONCE to cause the Receiver to survey. When HOLD state becomes true, SURV:STAT? returns 0.

HP Z3801A Commands

Table 4-2. HP Z3801A PRIMARY Commands (Continued)

Keyword/Syntax	Parameters/ Responses	Comments
:SATellite		Node Only
:TRACking?	returns INT, INT, ...	Returns a list of all satellites being tracked. Satellites are identified by PRN (range 1..32). 0 means no satellites being tracked.
:IGNore	INT, INT, ... (1 or more PRNs)	Sends or queries list of satellites (use PRN) to ignore. 0 means no satellites being ignored.
:INCLude	INT, INT, ... (1 or more PRNs)	Sends or queries for list of satellites (use PRN) to include. 0 means no satellites being included (i.e., they are all on ignore list).
:PREDicted		Node Only
:VISible?	returns INT, INT, ...	Returns list of satellites (PRN) that the almanac predicts should be visible, given date, time, and location (If any of these values are incorrect, the prediction will be incorrect). 0 means no sats predicted visible.

Table 4-2. HP Z3801A PRIMARY Commands (Continued)

Keyword/Syntax	Parameters/ Responses	Comments
:LEAPsecond		Node Only
:ACCumulated?	returns INT	Identifies accumulated time difference (in seconds) between GPS & UTC
:GPSTime?	returns INT in HEX	GPS time of next pending leapsecond.
:SYNChronize		Node Only
:IMMediate		Used during recovery to initiate a near instantaneous alignment of GPS 1 PPS and Receiver output 1 PPS.
:TCODe?	returns quoted string	Provides timecode message 980 to 20 ms prior to 1 PPS of indicated time. Specific response controlled by :TCOD:FORMat. Type of data provided: time in secs of next on-time edge, TFOM, leapsec data, alarm indication, and service request.
:TINTerval?	returns REAL in seconds	Returns the filtered GPS 1 PPS to internal oscillator 1 PPS interval. Generates an error (returns 9.91E+37) when this interval is unavailable (e.g., if no GPS 1 PPS or no sats available)

Chapter 4 Command Listing and Status Information
HP Z3801A Commands

Table 4-2. HP Z3801A PRIMARY Commands (Continued)

Keyword/Syntax	Parameters/ Responses	Comments
[SOURce]:ROSCillator		Node Only
:HOLDover		Node Only
:DURation?	returns REAL in seconds, 0 1	First parameter is amount of time that Receiver has been in current holdover or amount of time of last holdover, depending on holdover state. Second parameter identifies holdover state: 0 = not in holdover, 1 = in holdover.
:INITiate		Places the Receiver in holdover. It will stay there until you send :ROSC:HOLD:REC:INIT
:LIMit		Node Only
:RECOvery:IGNore		Action only. Causes transition in holdover state from waiting to recover to recovering (See :STATE? query below.) when the reason this transition isn't taking place is due to the TI limit being exceeded (Can query with :WAIT?).
:THReshold	send: <numeric> [s] returns: INTEGER	Sets the duration (in seconds) that should be used as a limit each time holdover begins. When the receiver remains in holdover longer than this duration, the EXCeed state will change (see next command).
:EXCeeded?	returns 0 1	Indicates whether or not the receiver has been in holdover longer than the amount of time specified by the THReshold command. If Yes, 1 is returned.
:THReshold	<numeric in seconds>	Sets the time interval limit (in seconds) which, if exceeded for some duration, will cause a transition from locked to holdover.
QUALity?	returns REAL in seconds	Returns an estimate of the time error that can be expected for a 1 day holdover, given the current state of SmartClock learning in the Receiver.
:RECOvery		Node Only
:INITiate		Initiates a recovery from holdover. Use this command to take the Receiver out of a manually selected holdover. It is not used to initiate holdover recovery in any other situation.
:WAITing?	returns HARDware GPS LIMit NONE	Returns prioritized reason why Receiver is waiting to recover: HARD means there is an internal hardware reason, GPS means there are no satellites, LIM means the TI between GPS & internal osc. is exceeding the limit. NONE means it isn't waiting to recover.

Chapter 4 Command Listing and Status Information
HP Z3801A Commands

Table 4-2. HP Z3801A PRIMARY Commands (Continued)

Keyword/Syntax	Parameters/Responses	Comments
STATus		Node Only
:OPERation		Node Only
:CONDition?	returns register value	
:ENABle	<mask value>	
[:EVENT]?	returns register value	
:HARDware		Node Only. See table below for bit assignments.
:CONDition?	returns register value	
:ENABle	<mask value>	
[:EVENT]?	returns register value	
:NTRansition	<filter value>	
:PTRansition	<filter value>	
:HOLDover		Node Only. See table below for bit assignments.
:CONDition?	returns register value	
:ENABle	<mask value>	
[:EVENT]?	returns register value	
:NTRansition	<filter value>	
:PTRansition	<filter value>	
:NTRansition	<filter value>	
:POWERup		Node Only. See table below for bit assignments.
:CONDition?	returns register value	
:ENABle	<mask value>	
[:EVENT]?	returns register value	
:NTRansition	<filter value>	
:PTRansition	<filter value>	
:PTRansition	<filter value>	
:PRESet		Presets all states in the STAT subsystem.. See other documentation for these settings. This command presets the status states differently than SYST:PRES. Note that STAT:PRES:ALARm (see next command) has same effect on STAT node as SYST:PRES
:ALARm		Presets all states in the STAT subsystem so that SRQ bit will set when conditions require it. See other documentation for these settings. This preset has same effect on STAT node as SYST:PRES
:PRESet		This command has the same effect on the STATus node as SYST:PRES.
:QUESTionable		Node Only. See table below for bit assignments.
:CONDition?	returns register value	
:USER	0 Off 1 On	User-controlled condition for questionable register. When ON, Alarm LED will light. See Questionable register assignments below.
:ENABle	<mask value>	
[:EVENT]?	returns register value	
:NTRansition	<filter value>	
:PTRansition	<filter value>	
SYSTem		Node Only
:ERRor?	returns INT, quoted string	The first parameter is error number, quoted string is error description.
:LANGuage	"PRIMARY" "INSTALL"	Select "INSTALL" for firmware download.
:PRESet		Returns Receiver parameters to factory settings.
:STATus?	returns ASCII	Outputs a fully formatted status screen.

Status Information

Listed below are the specific bit assignments for the status registers that have assignments that are customized by the timing Receiver. See Figure 4-1 for a simplified illustration of the relationships between the Status Registers.

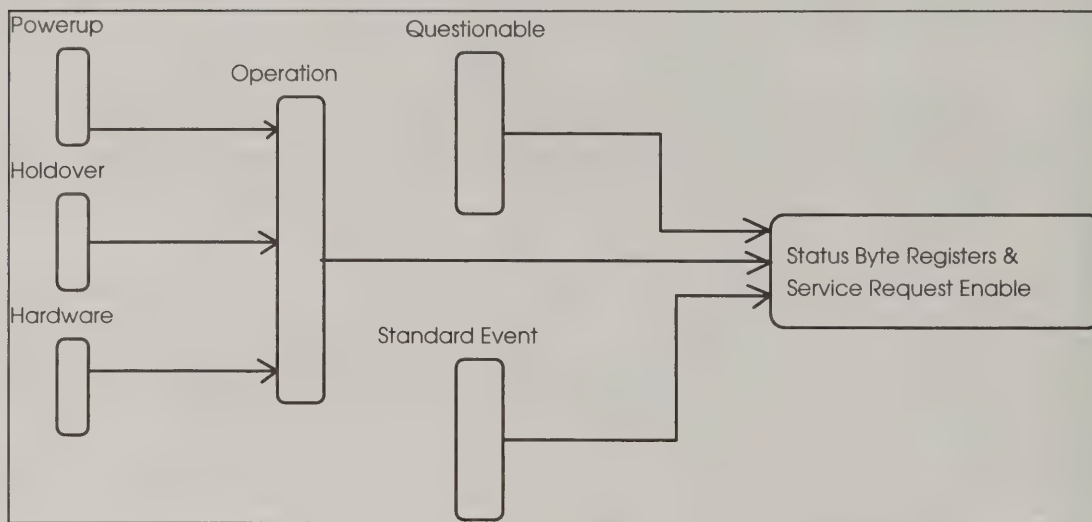


Figure 4-1. Simplified Relationships Between Status Registers

Standard Event Register Bit Assignments

Bit	Information Reported	Comments
0	Not Used	
1	Not Used	
2	Not Used	
3	Device-dependent Error	These are errors in the -3xx range or any positive numbered errors.
4	Execution Error	These are errors in the -2xx range
5	Command Error	These are errors in the -1xx range
6	Not Used	
7	Power-On	Identifies that the unit has undergone a transition to power-on (useful for detecting if power has been lost).

Status Information**Questionable Status Register Bit Assignments**

Bit	Information Reported	Comments
0	Time Figure of Merit Exceeds Limit	This is a measure of assessed quality of 1 PPS output. Limit may be product specific.
1	Frequency Figure of Merit Exceeds Limit	Measure of assessed quality of 10 MHz output. Limit may be product specific.
2	Time has been reset. Event only	This could occur after an extensive holdover period. When GPS is re-acquired, if receiver time differs from GPS time, this bit will be set.

Operation Status Register Bit Assignments

Bit	Information Reported	Comments
0	Powerup operation summary	Summary of powerup status register
1	Locked operation	Condition = 1 if locked to GPS, 0 otherwise.
2	Holdover operation summary	Summary of holdover status register.
3	Position hold operation	Condition = 1 if in position-hold mode, 0 if in survey mode.
4	Sufficient satellites to allow lock to GPS	Condition = 1 indicates current satellite tracking allows for locking.
5	Hardware status summary	Summary of hardware status register.
6	Log almost full	Condition = 1 indicates that the diagnostic log is nearly full (you may want to read and clear it)

Powerup Status Register Bit Assignments

Bit	Information Reported	Comments
0	First satellite tracked	Condition = 1 when first satellite becomes tracked following powerup
1	Oscillator oven warmed up	This bit sets when the internal oscillator has warmed up following powerup.
2	Date & Time Valid	This bit sets when first lock is attained after powerup.

Holdover Status Register Bit Assignments

Bit	Information Reported	Comments
0	Holding	Condition = 1 if in holdover and holding
1	Waiting	Condition = 1 if in holdover and waiting to recover
2	Recovering	Condition = 1 if in holdover and recovering
3	User-specified threshold exceeded.	Condition = 1 if in holdover longer than value set by :ROSC:HOLD:DUR:THReshold

Hardware Status Register Bit Assignments

Bit	Information Reported	Comments (NOTE: For every bit in this register, STAT:PRES or SYST:PRES will cause alarm to be generated if the bit sets)
0	Selftest failure.	Sets if something failed during powerup or user-initiated selftest.
1	+15V supply out of range	Continually evaluated during normal operation. Sets if detected.
2	-15V supply out of range	Continually evaluated during normal operation. Sets if detected.
3	+5V supply out of range	Continually evaluated during normal operation. Sets if detected.
4	Primary oven voltage out of range	Continually evaluated during normal operation. Sets if detected.
5	Secondary oven voltage out of range	Continually evaluated during normal operation. Sets if detected.
6	EFC voltage within 5% of limit	Continually evaluated during normal operation. Sets if detected.
7	EFC voltage at limit	Continually evaluated during normal operation. Sets if detected.
8	GPS 1 PPS failure	Continually evaluated during normal operation. Sets if detected.
9	GPS Failure	Continually evaluated during normal operation. Sets if detected.
10	Time Interval Errors have occurred. This is an event only (there is no condition information; condition bit will always be 0)	Continually evaluated during normal operation. Sets if detected. Event only (i.e., condition bit doesn't change)
11	EEPROM write failure. This is an event only (there is no condition information; condition bit will always be 0)	Sets if there is a failure in any attempt to save information to non-volatile memory

Information that Appears in the Diagnostic Log

Significant events are logged by the timing Receiver. Each entry contains a brief description of the event and a time of occurrence. See the DIAG:LOG command node for commands that allow control and retrieval of logged information. Listed below are the possible log messages:

Log Message	Comments
Log cleared	Always becomes first log message when the log is cleared. See :DIAG:LOG:CLEAR
Power on	Indicates Receiver has been powered on
Re-boot	Indicates Receiver processor has re-booted.
Survey mode started	Indicates beginning of survey for position.
Position hold mode started	Indicates transition from survey to position hold
GPS lock started	Indicates transition into locked operation
Holdover started, manual	Indicates transition to holdover based on user-request. See :ROSC:HOLD:INIT
Holdover started, GPS	Indicates transition to holdover due to GPS satellite conditions (e.g., loss of satellite) or gross problem with GPS 1 PPS
Holdover started, TI error	Indicates transition to holdover due to problem detected with Receiver ability to properly measure interval between GPS 1 PPS and internal osc. 1 PPS.
Holdover started, TI limit exceeded	Indicates transition to holdover due to the interval from GPS 1 PPS to internal osc. 1 PPS exceeding a limit threshold for numerous measurements. See :ROSC:LIM:THReshold.
Holdover started	Indicates transition to holdover for any reason not covered above.
SYST:PRES performed	Indicates that the instrument has been preset to factory settings.
System preset	Indicates that the instrument has been preset to factory settings.
EEPROM save failed	Indicates that an attempt to save information to the EEPROM has failed.

Model for Powerup, Locked, and Holdover States

Figure 4-2 provides a model for thinking about the relationships between powerup, locked, and holdover operation of the Receiver. This model is consistent with commands that allow these states to be evaluated (e.g., see :ROSC:STATE?). Three of the states are part of holdover operation. If the Receiver is in any of these states, the holdover LED will be lit:Model for Powerup, Locked, and Holdover States

- *Holding* means that the Receiver has been placed in holdover by the user. An explicit command will be required to initiate an exit from holdover.
- *Waiting to recover* means that the Receiver is waiting for conditions that are needed to allow the process of recovery from holdover to begin. Once these conditions are met, the Receiver will transition on its own to the recovering state.
- *Recovering* means that the Receiver is actively working to become locked. All conditions needed to proceed toward locked have been met. Expect an eventual spontaneous transition to *locked* (unless external conditions change to prevent this, such as loss of tracked satellites).

The other two states are:

- *Powerup*, indicating that the Receiver hasn't yet achieved GPS lock since it's been powered on. Other queries can provide insight as to the cause if the Receiver is remaining in powerup longer than expected.
- *Locked*, meaning that the Receiver is locked to GPS. The locked LED will be lit.

Commands that can be used to transition between states are shown in Figure 4-2.

Chapter 4 Command Listing and Status Information
Model for Powerup, Locked, and Holdover States

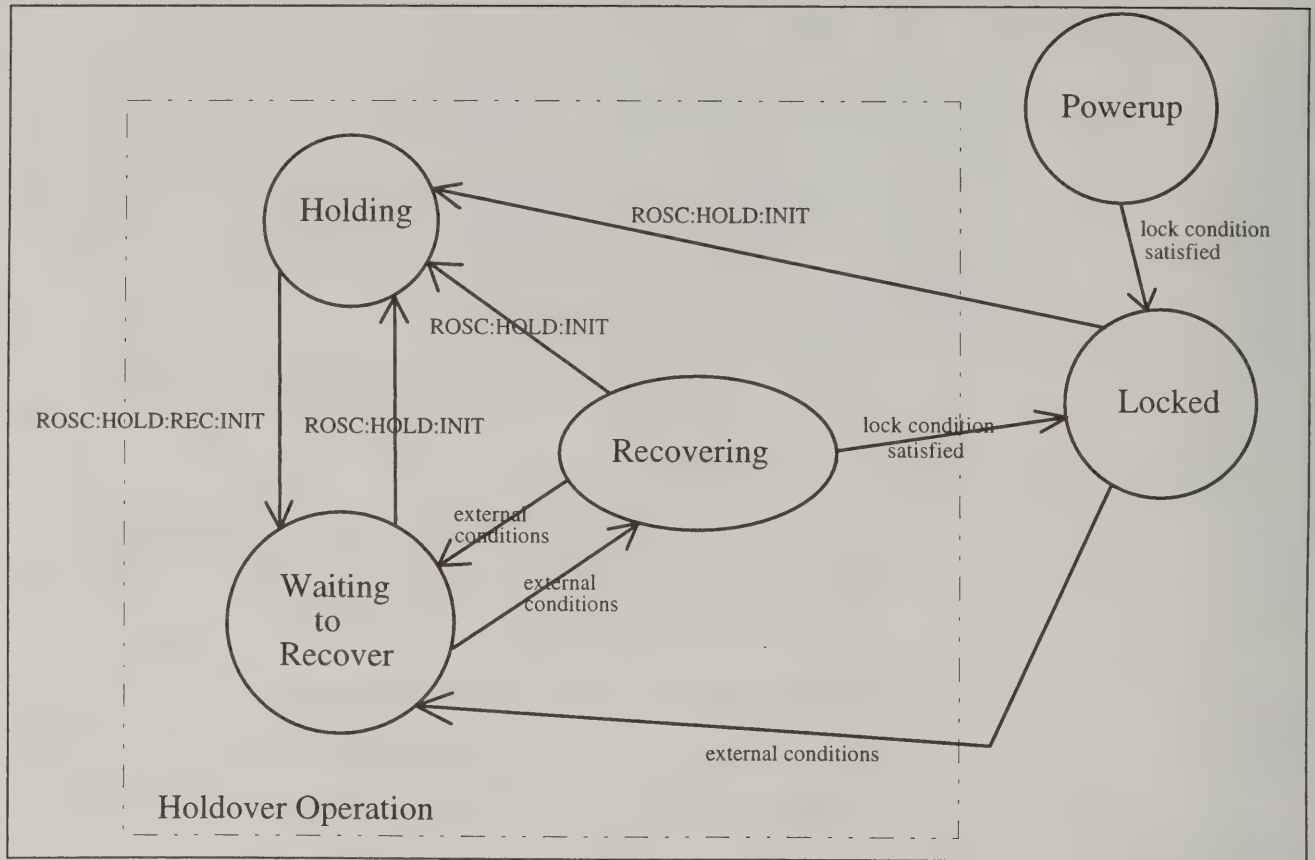


Figure 4-2. Model of Relationships Between Powerup, Locked, and Holdover Operation of the Receiver

Error Messages

Number	Error String	Cause
+0	No Error	The error queue is empty. Every error in the queue has been read. (SYSTEM:ERRor? query) or the queue was cleared by power-on or *CLS
-100	Command error	
-101	Invalid character	A syntactic element contains a character that is invalid for that type.
-102	Syntax error	An unrecognized command or data type was encountered.
-103	Invalid separator	The parser was expecting a separator and encountered an illegal character.
-104	Data type error	The parser recognized a data element different than the one allowed. For example, numeric or string data was expected, but block data was received.
-108	Parameter not allowed	More parameters were received than expected for the header.
-109	Missing parameter	Fewer parameters were received than required for the header.
-112	Program mnemonic too long	The header or character data element contains more than twelve characters.
-113	Undefined header	The header is undefined. For example, the command ":HELLO".
-120	Numeric data error	This error, as well as errors -121 through -129, is generated when parsing a data element which appears to be numeric. This particular error message is used when the Receiver cannot detect a more specific error.
-121	Invalid character in number	An invalid character for the data type being parsed was encountered. For example, a "9" in octal data.
-123	Exponent too large	Numeric overflow.
-124	Too many digits	The mantissa of a decimal numeric data element contained more than 255 digits excluding leading zeros.
-128	Numeric data not allowed	A legal numeric data element was received, but the Receiver does not accept one in this position for the header.
-131	Invalid suffix	The suffix does not follow the syntax described in IEEE 488.2 or the suffix is inappropriate for the Receiver.
-134	Suffix too long	The suffix contained more than 12 characters.
-138	Suffix not allowed	A suffix was encountered after a numeric element that does not allow a suffix.
-141	Invalid character data	The character data element contains an invalid character.
-148	Character data not allowed	A legal character data element was encountered where prohibited by the Receiver.
-150	String data error	This error can be generated when parsing a string data element. This particular error message is used if the Receiver cannot detect a more specific error.
-151	Invalid string data	A string data element was expected but was invalid for some reason.
-158	String data not allowed	A string data element was encountered but was not allowed by the Receiver at this point in parsing.
-170	Expression error	This error can be generated when parsing an expression data element. It is used if the Receiver cannot detect a more specific error.
-178	Expression data not allowed	Expression data was encountered but was not allowed by the Receiver at this point in parsing.

Error Messages

Error Messages (Continued)

Number	Error String	Cause
-200	Execution error	This is the ...need a good explanation here
-220	Parameter error	Indicates that a program data element error occurred. This error is used when the receiver cannot detect more specific errors.
-221	Settings conflict	Indicates that a legal program data element was parsed but could not be executed due to the current receiver state.
-222	Data out of range	Indicates that a legal program data element was parsed but could not be executed because the interpreted value is outside the legal range defined by the receiver.
-223	Too much data	Indicates that a legal program data element of block, expression, or string type was received that contained more data than the receiver could handle due to memory or related receiver-specific requirements.
-224	Illegal parameter value	Used where exact value, from a list of possible values, was expected (but not received).
-230	Data corrupt or stale	No valid data available.
-240	Hardware error	Indicates that a legal program command or query could not be executed because of a hardware problem in the receiver.
-241	Hardware missing	Indicates that a legal program command or query could not be executed because of missing receiver hardware.
-300	Device-specific error	This is the generic device-dependent error.
-310	System error	Indicates that a system error occurred.
-321	Out of memory	Indicates that the receiver has detected that insufficient memory is available.
-330	Self-test failed	Indicates at least one failure occurred when *TST? or :DIAG:TEST? was executed.
-360	Communication error	This is the generic communication error for devices that cannot detect the more specific errors described for errors -361 through -363 [we don't expect it to occur in receiver]
-361	Parity error in program message	Parity bit not correct when data received for example, on a serial port
-362	Framing error in program message	A stop bit was not detected when data was received for example, on a serial port (for example, a baud rate mismatch).
-363	Input buffer overrun	Software or hardware input buffer on serial port overflows with data caused by improper or nonexistent pacing.
+521	EEPROM failed	An attempt to write to EEPROM failed.

Specifications and Characteristics

The specifications and characteristics of the HP Z3801A GPS Time and Frequency Reference Receiver are provided in this chapter.

GPS Receiver Features

Six-channel, parallel tracking GPS engine
C/A Code, L1 Carrier
HP SmartClock™ technology
HP Enhanced GPS technology

10 MHz Output Characteristics

Frequency Accuracy: $< 1 \times 10^{-9}$, one day average

Phase Noise:

Offset (Hz)	SSB Phase Noise (dBc)
100	-120
1000	-135
10000	-135

J2

Waveform: Sine wave, 1.9 V_{p-p} into a 50Ω load (typical)

Source Impedance (nominal): 50Ω

Coupling: AC

Connector: BNC

NOTE

Complete product specifications are defined by Qualcomm CDMA Land Network Specification 80-12225.

1 PPS Output Characteristics

Jitter of leading edge: < 200 nanoseconds between pulses.

Accumulated time error: < 7 microseconds per day unlocked, for 24 hours, after one day of stabilization and 2 days of locked operation with a fixed antenna location.

Waveform: Pulse width 10 to 50 microseconds.

Time Accuracy: < 1 microsecond (Locked to GPS)

Connector: DB25 (J3)

Front Panel Indicators (LEDs)

Power (HP Z3801A has power applied)

Enabled, Active (user-defined operation)

GPS Lock (HP Z3801A is locked to GPS)

Holdover (HP Z3801A is operating in holdover mode)

Alarm (indicates an alarm condition)

Remote Interface (Port 1)

RS-422 DTE configuration: Complete remote control and interrogation of all instrument functions and parameters.

Baud Rate: 19200 — 7 data bits, 1 start bit, 1 stop bit, odd parity (fixed configuration).

Connectors: 25-pin female rectangular D subminiature (DB-25) on rear panel.

Antenna and Cabling Information

The HP 58504A Antenna Assembly is recommended to ensure specified performance.

Power Requirements (supplied by the HP Z3801A): 5 Volts nominal; 50 ma maximum.

Antenna Cable: 200 feet Cables are Belden 9913 with a type N connector one end and a type TNC connector on the other.

Environmental

HP 58504A Antenna Assembly

Operating: -40° C to +80° C

Storage: -40° C to +85° C

GPS Time and Frequency Reference Receiver

Operating: 0° C to +50° C

Storage: -40° C to +80° C

Power Requirements

DC Power:

BTS; +27 Vdc nominal (19 Vdc \pm 0.5 Vdc to 30 Vdc \pm 0.5 Vdc operating range). Greater than 23 Vdc \pm 0.5 Vdc starting.

BSC; -54 Vdc nominal (-60 Vdc \pm 0.5 Vdc to -37 Vdc \pm 0.5 Vdc operating range). Less than -46 Vdc \pm 0.5 Vdc starting.

Input Power (BTS and BSC): < 25 Watts (nominal)

General Information

Dimensions: 127 mm (5 in) Height × 301.5 mm (11.9 in) Width × 345.4 mm (13.6 in) Depth. (Half-Rack Module)

Weight: 3.6 kg (8 lbs)

Acceleration: 2g

Power: < 25 Watts

Surge withstand: Meets IEEE/ANSI C37.90, C37.90.1, C37.90.2

Other Information

The standard HP Z3801A does not include a display or a keypad. While not necessary, it may be convenient to track the Receiver's progress during installation and startup by monitoring the satellites being tracked, location (position), time and other parameters.

Achieving accurate time of day requires care in determining cable delays, Receiver bias, position (Lat, Lon, Alt), atmospheric conditions and other parameters which are dependent on each individual installation.

Index

- 1 PPS output, 1-2
- 1 PPS output, 2-6
- 1 PPS output synchronization, 1-14
- 10 MHz OUT J2 connector, 1-3
- 10 MHz output, 2-6
- 10 MHz reference output, 1-2, 1-14
- 10811 oven reference oscillator, 2-8
- 1PPS output, 1-3

A

- accessories, ix
 - available, ix
 - Supplied, ix
- acquiring GPS lock, 2-9
- ACQUISITION, 3-11, 3-14
- Active indicator, 1-2, 2-8
- Alarm, viii
- Alarm indicator, 1-2, 1-8, 2-8
- AMP® power connector pinouts, 1-5
- antenna, 2-3
 - cable length delay, 2-4
 - delay values, 2-4
 - propagation delay, 2-4
- ANTENNA and Cabling Information, 5-4
- antenna assembly, x
- antenna cable, x, 2-3
- antenna cables, x
- antenna delay, 3-17
- ANTENNA J1 connector, 1-3
- Antenna Line Amplifier, x
- application note, xi
- arrester
 - lightning, x
- azimuth angle, 3-15

B

- Belden® 8267 cable, 2-3
- BTS power supply, ix

C

- cable
 - antenna, x, 2-3
 - interconnect, antenna, x
 - LMR 400, 2-3
 - recommended, 2-3
 - RG-213, 1-4, 2-3
- cable assemblies, 2-3

- cable length delay, 2-4
- cables, 2-5
- CDMA Cellular Land Network
 - wireless base stations, viii, 2-6
- chassis ground, 1-3
- commands, 1-14
- commands, examples, 1-14
- compensating for antenna cable delay, 1-15
- configuration guide, xi, 1-4
- configuration, DCE device or PC, 1-8, 2-9
- conformance
 - SCPI, 4-3
- connecting a computer, 2-9
- connecting power, 1-4
- Coordinated Universal Time (UTC), 2-6
- customer supplied RS-422 interface cable, 2-9
- customizing installation, 1-14
- customizing the Receiver operation, 1-13

D

- DC INPUT J4 connector, 1-3
- dc power connections, 2-6
- DCE device, viii
- DCE device configuration, 1-8
- dc-power connector wiring, 1-4
- delay value, 2-5
- delay values, 2-4
- description
 - holdover, 2-10
- description of the HP Z3801A, viii
- diagnostic log, 4-12
- difficulty
 - in case of a problem, 2-11
- digital communications equipment, viii
- documents
 - available, xi

E

- E1 ground stud, 1-3, 1-5
- EFC, 3-18
- elevation angle, 3-15
- elevation mask angle, 1-16, 3-16
- Enabled indicator, 1-2, 2-8

environmental information, 5-4

error messages, 4-15

example commands, 1-14

external power supply, 1-5

F

features and functions, 5-2

FFOM (Frequency Figure of Merit),
2-9

FFOM value, 3-14

foldout, 3-19

foldout, Receiver Status screen, 3-19

G

GPS ANTENNA input, 2-3

GPS Lock indicator, 1-2, 2-2, 2-8

GPS status, 1-9

GPS time, 3-16

ground plane, ix

ground stud, 1-3

guide organization, vii

H

Hardware Status Register, 4-12

HEALTH MONITOR, 3-11

health monitor screen, 3-11

height, 1-17

help from HP, 1-4, 2-4

Hold position mode, 3-17

holdover, 2-2, 2-8, 3-12

tutorial, 3-8

holdover description, 2-10

Holdover indicator, 1-2, 2-2, 2-8

holdover mode, viii, 2-6

holdover operation, 3-8

holdover state, 4-13

Holdover Status Register, 4-11

holdover threshold, 3-14

How to use the Status Screen, 3-3

HP 10811 oven oscillator, 2-8

HP 58506A 50ft Cable, x

HP 58509A antenna line amplifier, x

HP 58518A/519A cable, 2-5

HP 58518AA/519AA cable, 2-5

HP 58520A/521A cable, 2-5

HP 58520AA/521AA cable, 2-5

HP SmartClock, 2-8

HP SatStat, 1-11, 3-3

operating, 1-12

HP SmartClock, 3-11

HP SmartClock compensation, 2-6

HP Z3801A GPS Receiver Commands,
4-2

I

I/O Port 1 J3 connector, 1-3

Ignore, 3-15

in case of a problem, 2-11

indicator

Active, 1-2, 2-8

Alarm, 1-2, 1-8, 2-8

Enabled, 1-2, 2-8

GPS Lock, 1-2, 2-8

Holdover, 1-2, 2-8

Power, 1-2, 1-8, 2-8

indicators, 2-8

input

antenna, 2-3

POWER, 2-3, 2-6

Input/Output (I/O), 2-7

INSTALL Commands, 4-4

installing HP SatStat, 1-11

interconnect cables, x

interface cable, 2-9

internal reference oscillator, 1-2, 2-8

L

latitude, 1-17

LED

Active, 1-2, 2-8

Alarm, 1-2, 1-8, 2-8

Enabled, 1-2, 2-8

GPS Lock, 1-2, 2-8

Holdover, 1-2, 2-8

Power, 1-2, 1-8, 2-8

Light-Emitting Diodes, viii

lightning arrester, x

line amplifier, x

line amplifier requirements, 2-4

list of options, ix

LMR cables, 1-4

LMR 400 cable, 2-3

local time, 1-16

local time zone, 3-16

locked state, 4-13

longitude, 1-17

M

manuals, xi

messages

diagnostic log, 4-12

Model for Powerup, Locked, and

Holdover States, 4-13

N

not tracking., 3-14

O

obtaining GPS status, 1-9
 One Pulse Per Second, 2-6
 Operation Status Register, 4-11
 options, ix
 output
 1 PPS, 2-6
 10 MHz, 2-6

P

plug, dc-power connector, 1-5
 Position, 3-17
 position survey, 1-15
 power connection, 1-4
 Power indicator, 1-2, 1-8, 2-2, 2-8
 POWER input jack, 2-3, 2-6
 power requirements, 5-4
 powering up the Receiver, 1-6
 power-on self test, 1-8
 power-up procedure, 1-6
 powerup state, 4-13
 Powerup Status Register, 4-11
 PRIMARY Commands, 4-4
 propagation delay, 2-4
 pseudorandom noise, 3-15

Q

quality
 FFOM, 3-14
 signal, 3-13, 3-14
 TFOM, 3-13
 Questionable Status Register, 4-11

R

rack mount tray, ix
 reading Receiver Status screen, 3-11
 rear-panel RS-422 Serial Port/10
 MHz/1PPS connection wiring, 2-7
 receiver
 antenna cable delay compensation,
 1-15
 command syntax conventions, 4-3
 controlling functions via commands,
 1-14
 customizing operation, 1-9, 1-13
 degraded timing performance, 1-16
 diagnostic log, 4-12
 elevation mask angle, 1-16
 error messages, 4-15
 grounding, 1-3
 HP SatStat installation, 1-11
 INSTALL commands, 4-4
 messages, diagnostic log, 4-12

messages, error, 4-15
 position survey, 1-15
 power input, 1-3
 power-on event sequence, 1-8
 power-on self test, 1-8
 PRIMARY commands, 4-4
 relationships between powerup,
 locked, and holdover operation,
 4-14
 RS-422 serial port, 1-3
 RS-422 serial port, specifications,
 5-3
 serial-port configuration, 1-8, 2-9
 specifications and characteristics,
 5-2
 status information, 4-10
 Receiver Status screen, 3-3, 3-11
 Receiver Status Screen at a Glance,
 3-19
 Recovery, 3-12
 recovery from Holdover, 3-10
 RG-213 cable, 2-3
 RG-213 cables, 1-4
RS-232 cables supplied, 1-4
 RS-422 interface cable, customer
 supplied, 2-9
 RS-422 serial port, ix, 1-9, 2-2, 2-7
 RS-422 serial port, specifications, 5-3
 RS-422 serial-port configuration
 values, 1-8, 2-9

S

Safety Earth Ground, 1-3
 sample status screen, 1-10, 3-11
 Satellite Status, 3-14
 SCPI
 conformance, 4-3
 version, 4-3
 Self Test, 3-18
 serial interface, 1-3
 serial-port configuration values, 1-8
 signal
 quality, 3-13, 3-14
 signal strength, 3-15
 SmartClock, 2-8
 SmartClock's PLL, 3-14
 SmartClock Mode, 3-12
 specifications, 5-2
 HP Z3801A, 5-2
 Standard Event Register, 4-10
 Status Registers
 Hardware Status, 4-12

Index

- Holdover Status, 4-11
- Operation Status, 4-11
- Powerup Status, 4-11
- Questionable Status, 4-11
- simplified relationships, 4-10
- Standard Event, 4-10
- status screen, 3-4, 3-11
- strength of the signal, 3-15
- Survey position mode, 3-17
- survey using command, 1-15
- SYNCHRONIZATION, 3-11
- SYSTEM
 - PRESET command, 1-14
 - STATUS? command, 1-9, 3-3, 4-9

T

- terminal emulation program*, 1-7
- TFOM value, 3-13
- Time and Frequency Reference
 - Receiver, viii
- Timing Receiver Windows User
 - Interface, 1-7
- timing shift, 3-14
- troubleshooting, 2-11
- tutorial, 3-3
 - using the Status Screen, 3-3

U

- user interface, ix
- UTC, 2-6
- UTC (USNO), 2-6
- UTC time, 1-16, 3-16

W

- Windows, 1-9
- wiring, dc-power input, 1-4

Technical Support:

If you need technical assistance with a Hewlett-Packard test and measurement product or application, please contact the Hewlett-Packard office or distributor in your country.

Asia Pacific:**Hong Kong**

(852) 2599 7889

India

(91-11) 647-2311

Japan:

Hewlett-Packard Japan Ltd.
Measurement Assistance Center
9-1, Takakura-Cho, Hachioji-Shi,
Tokyo 192, Japan
Tel: (81-426) 56-7832
Fax: (81-426) 56-7840

Korea

(82-2) 769 0800

Malaysia

(60-3) 291 0213

Philippines

(63-2) 894 1451

PRC

(86-10) 6505-0149

Singapore

(65) 290 6375

Taiwan

(886-3) 492 9666

Thailand

(66-2) 661 3900

**For countries in Asia Pacific not
listed, contact:**

Hewlett-Packard Asia Pacific Ltd.
17-21/F Shell Tower, Times Square
1 Matheson Street
Causeway Bay
Hong Kong
Fax: (852) 2506 9285

Australia/New Zealand:

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
Australia
1 800 629 485

Canada:

Hewlett-Packard Canada Ltd.
5150 Spectrum Way
Mississauga, Ontario
L4W 5G1
(905) 206 4725

Latin America:

Hewlett-Packard
Latin American Region Headquarters
5200 Blue Lagoon Drive
9th Floor
Miami, Florida 33126
U.S.A.
(305) 267 4245/4220

United States:

Hewlett-Packard Company
Test and Measurement Organization
5301 Stevens Creek Boulevard
Building 51L-SC
Santa Clara, California 95052-8059
1 800 452 4844

Europe, Africa and Middle East**Austria:**

(1) 25000-0

Baltic Countries

(358) 08872 2100

Belgium and Luxembourg:

(02) 778 3417

Czech Republic:

(2) 471 7327

Denmark:

45 99 10 00

Finland:

(90) 88 721

France:

(1) 69.29.41.14

Germany:

(0180) 532 62-33

Greece:

(1) 726 4045

Hungary:

(1) 252 4705

Ireland:

(01) 284 4633

Israel:

(03) 5380 333

Italy:

02 - 92 122 999

Netherlands:

(020) 547 6669

Norway:

(22) 73 57 50

Poland:

(22) 608 7700

Portugal:

(11) 482 85 00

Russia:

(7/095) 928-6885
Fax: (7/095) 916-9844

South Africa:

(011) 806 1000

Spain:

34 1 631 1323

Sweden:

(08) 444 22 77

Switzerland:

(01) 735 7111

Turkey:

(212) 224 59 25

United Kingdom:

(01344) 366 666

**For countries in Europe/Middle
East and Africa not listed, contact:**

Hewlett-Packard
International Sales Europe
Geneva, Switzerland
Tel: +41-22-780-4111
Fax: +41-22-780-4770

Continued from front matter . . .

Warranty (contd)

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designed by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THAT IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusive Remedies

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

Assistance

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office.

Safety Considerations (contd)

WARNING

ANY INTERRUPTION OF THE PROTECTIVE GROUNDING CONDUCTOR (INSIDE OR OUTSIDE THE INSTRUMENT) OR DISCONNECTING THE PROTECTIVE EARTH TERMINAL WILL CAUSE A POTENTIAL SHOCK HAZARD THAT COULD RESULT IN PERSONAL INJURY. (GROUNDING ONE CONDUCTOR OF A TWO CONDUCTOR OUTLET IS NOT SUFFICIENT PROTECTION.)

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

If this instrument is to be energized via an autotransformer (for voltage reduction) make sure the common terminal is connected to the earthed pole terminal (neutral) of the power source.

Instructions for adjustments while covers are removed and for servicing are for use by service-trained personnel only. To avoid dangerous electric shock, do not perform such adjustments or servicing unless qualified to do so.

 
 
For continued protection against fire, replace the line fuse(s) only with 250V fuse(s) of the same current rating and type (for example, normal blow, time delay). Do not use repaired fuses or short circuited fuseholders.

Acoustic Noise Emissions

LpA<47 dB at operator position, at normal operation, tested per EN 27779. All data are the results from type test.

Geräuschemission

LpA<47 dB am Arbeitsplatz, normaler Betrieb, geprüft nach EN 27779. Die Angaben beruhen auf Ergebnissen von Typenprüfungen.

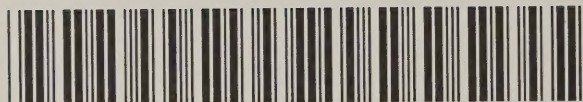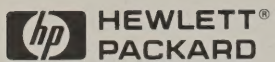

Manual Part Number Z3801-90001



Printed on recycled paper.

Printed in U.S.A., NOVEMBER 1996